User Manual

XL2 Data Explorer

PC-Software for the Analysis of XL2 Sound Level Data

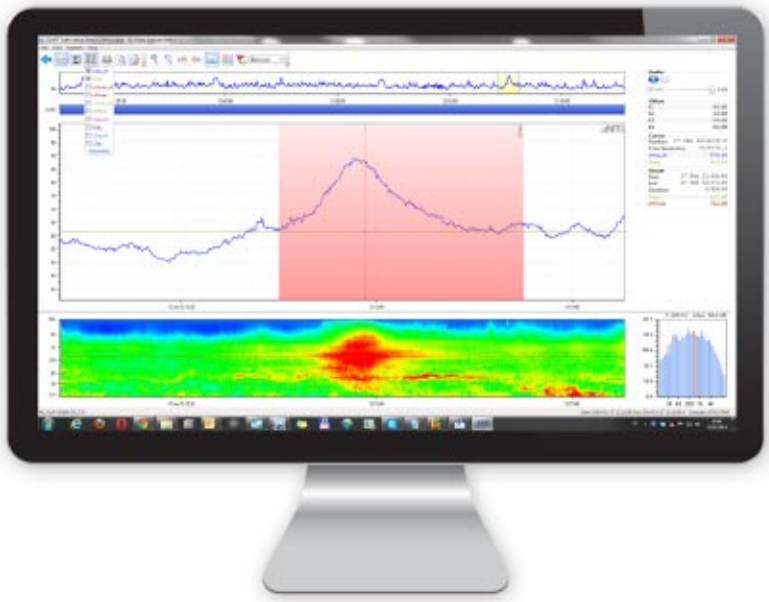

Doc version *1.4.0/0e*
Refers to SW *v1.4.0 or higher*

NTi Audio AG is an ISO9000:2008 certified company

Table of Contents

Part I Introduction 5

1 Installation ... 6
2 Software structure ... 7
3 Tutorial ... 9
4 License agreement ... 16

Part II Project view 19

1 Data import ... 21
2 Preferences ... 24
3 Project info ... 26

Part III Chart view 28

1 Overview chart ... 31
2 Audio bar & player ... 32
3 Setup Levels ... 33
4 Audit Intervals ... 35
5 Main chart, Info section ... 37
6 Spectrogram, RTA spectrum ... 39
7 Cursor ... 42
8 Zoom & pan ... 44
9 Markers ... 45

Part IV Result view 48

1 Markers (in Result view) ... 49
2 Audit Intervals (in Result view) ... 50

Part V Level Calculations 52

1 Level statistics ... 52
Percentiles ... 54
2 Day Night Level ... 55
LDEN examples ... 56

Part VI Reporting 60

1 Report properties ... 60
2 Report printout ... 61
3 Data Export ... 62

Index 63

© 2015 NTi Audio AG, MBe

Part

1 Introduction

The XL2 Data Explorer is a PC-based software application with a powerful data processor for easy and fast analysis of sound level measurement data. Visualize, analyze and control millions of data points with this tool that is dedicated to acoustic consultants and noise measurement professionals. It provides a convenient way to view and manage your data and quickly create professional customized reports.

- Visualization of the entire data set including spectrogram.
- Very fast zoom and pan response over the entire log.
- Timeline for audio files and synchronized playback including proper leveling.
- Exclude markers eliminate unwanted areas from the level calculations.
- Include markers allow level calculations of specific areas.
- Visualization of recorded events analyze and report only the noise infringements.
- Audit interval and percentile LN calculation
- Results are immediately visible as recalculations are executed on the fly.
- Report and customize your results simply and professionally.

For dedicated support, please contact your nearest NTi Audio partner.

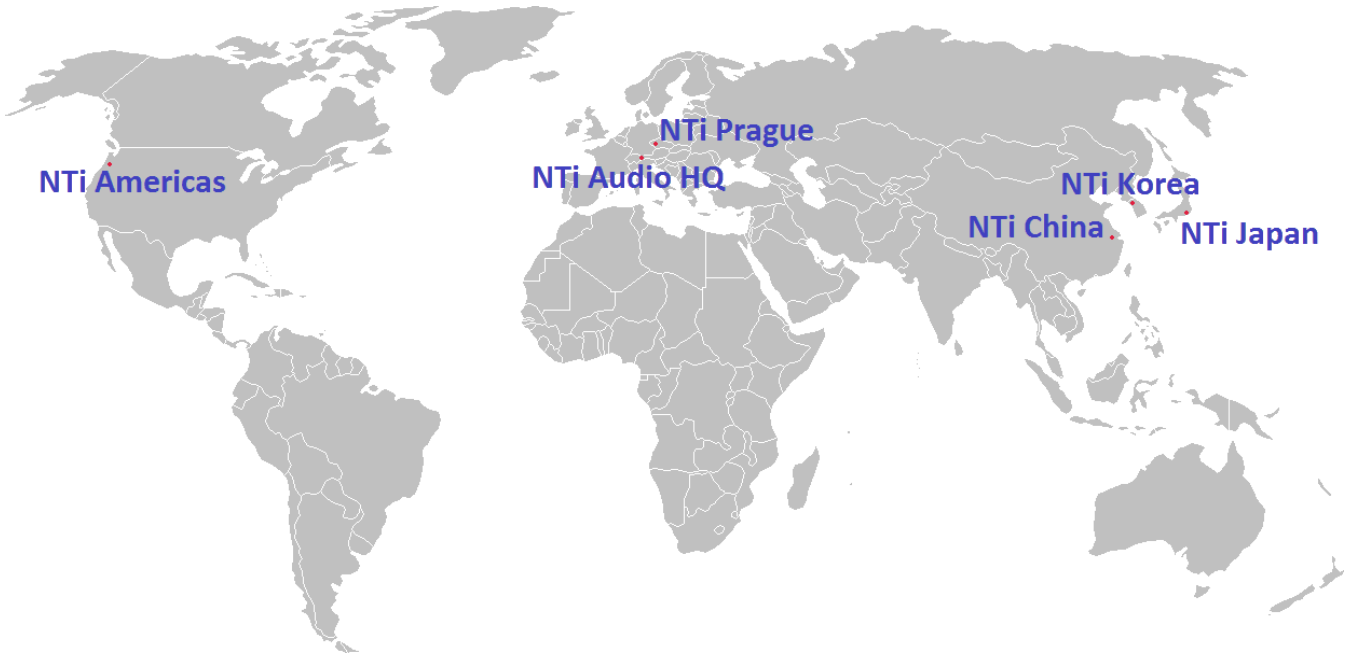

© NTi Audio AG
Im alten Riet 102
9494 Schaan
Liechtenstein, Europe

Phone +423 239-6060
Fax +423 239-6089

www.nti-audio.com

v1.40/0e, July 2015

© 2015 NTi Audio AG, MBe

1.1 Installation

System requirements

- Supported operating systems:
  - Windows XP SP3
  - Windows Vista SP1 or later
  - Windows 7
  - Windows 8 Pro or 8.1 Pro
- Hardware requirements:
  - Recommended Minimum: Pentium 1 GHz or higher with 512 MB RAM or more
  - Video board with shader model 3.0 or higher (DirectX 9.0c)
- Minimum disk space: 2 GB

Hint ***Result data that is exported from the XL2 Data Explorer to MS Excel is saved in "*.xlsx" format. Please check the compatibility of your MS Office installation with this file format, and install the Microsoft Compatibility Pack if necessary.***

Software installation procedure

1. Access your personal account in My NTi Audio
2. Download the XL2 Data Explorer installation package
3. Double left-click on the installation file

XL2 Acoustic and Audio Analyzer

- Firmware V2.70 or higher (legacy data require minimum firmware V2.32 or higher)
- XL2 Data Explorer Option installed on the XL2 device (if you don't have the Option yet, contact your nearest NTi Audio partner).

© 2015 NTi Audio AG, MBe

1.2 Software structure

Views

The XL2 Data Explorer offers three different views,

- Project: list of the imported projects
- Chart: detailed project data in graphical form + numerical readouts
- Result: numerical readout of the measurement results, and of marked sections

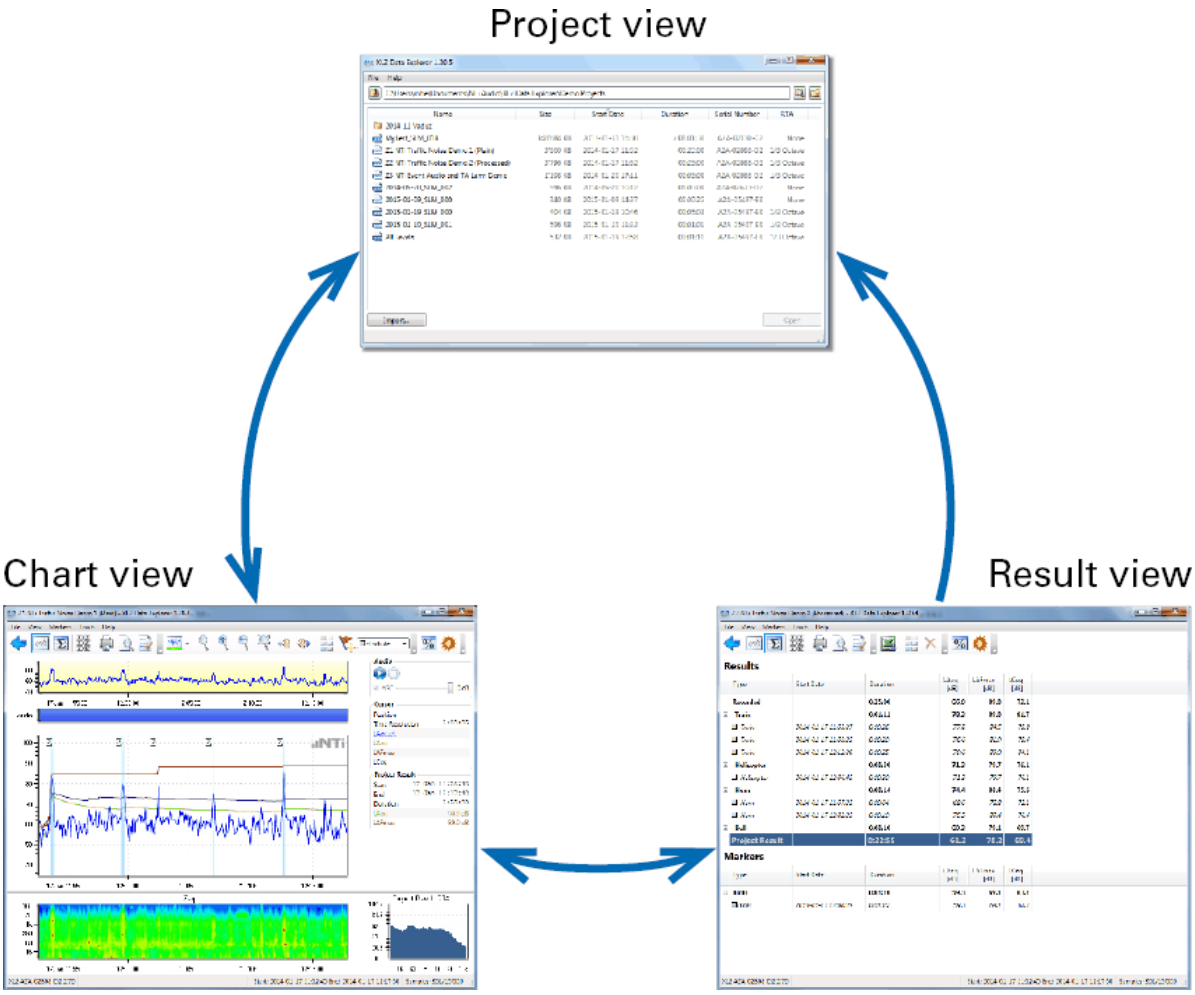

XL2 Data Explorer views

Hint ***By switching from the Chart view or Result view to the Project view, all project data (i.e. including your amendments) will be automatically saved.***

© 2015 NTi Audio AG, MBe

Multiple instances

It is possible to run two or more instances of the XL2 Data Explorer on one PC.

Multiple instances

This feature may be used, for example, for comparing

a) XL2 Test files that were recorded in the same location, but at different dates,

b) XL2 Test files that were record during the same event, but at different positions,

c) different sections of the same XL2 Test file.

Hint ***A project file that is simultaneously open in two instances, can be edited only in the first instance.***

© 2015 NTi Audio AG, MBe

1.3 Tutorial

The following step-by-step guideline demonstrates a typical use of the XL2 Data Explorer.

1. Activate the logging as well as the spectra and the audio file recording on the XL2 Audio and Acoustic Analyzer, then execute a sound level measurement and save the test.

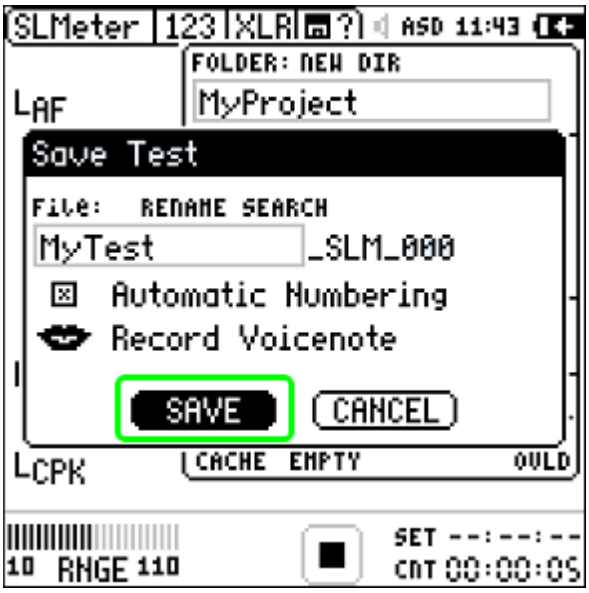

2. Connect the XL2 directly to your PC via USB, or insert the SD-card into a card reader for faster data transfer.

3. Run the XL2 Data Explorer and click on the 'Import' button in the Projects view.

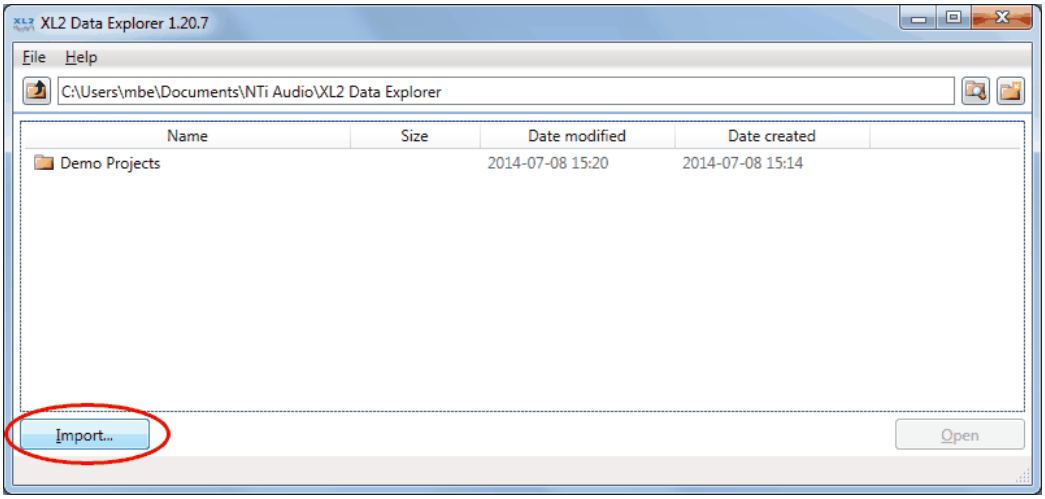

© 2015 NTi Audio AG, MBe

4. Select the XL2 Test file just recorded and click 'Open'. The XL2 Data Explorer imports the logged data and audio file; this procedure can take a few seconds to some minutes, depending on the file sizes. During this process, all relevant files (including the WAV file associated with the selected project) are copied into the Data Explorer project folder.

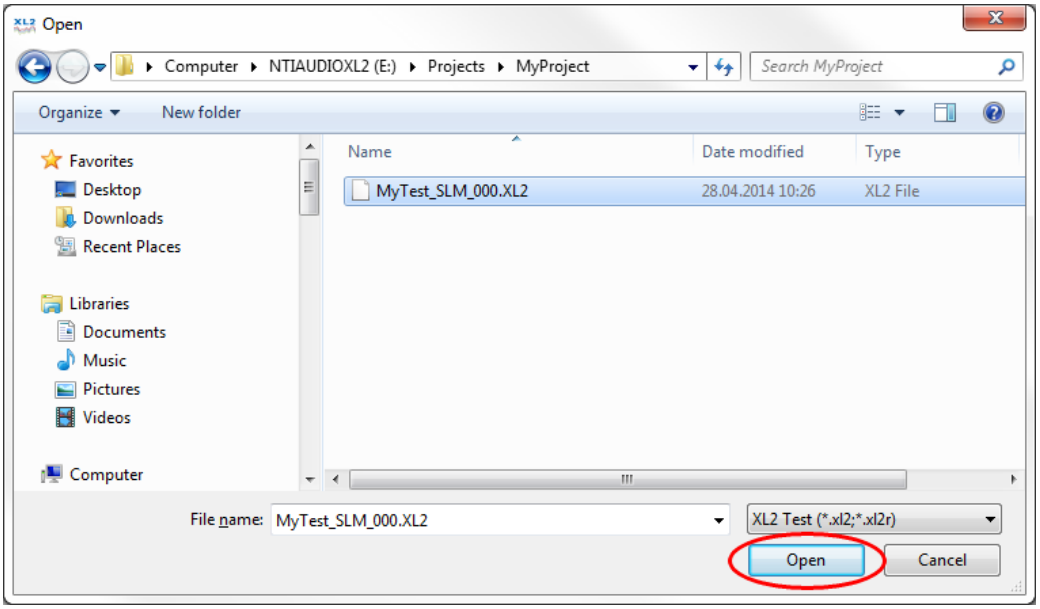

5. As soon as the import process is completed, select the imported project and click on the 'Open' button to open it in the Chart view.

6. You can now view the level curves and results.

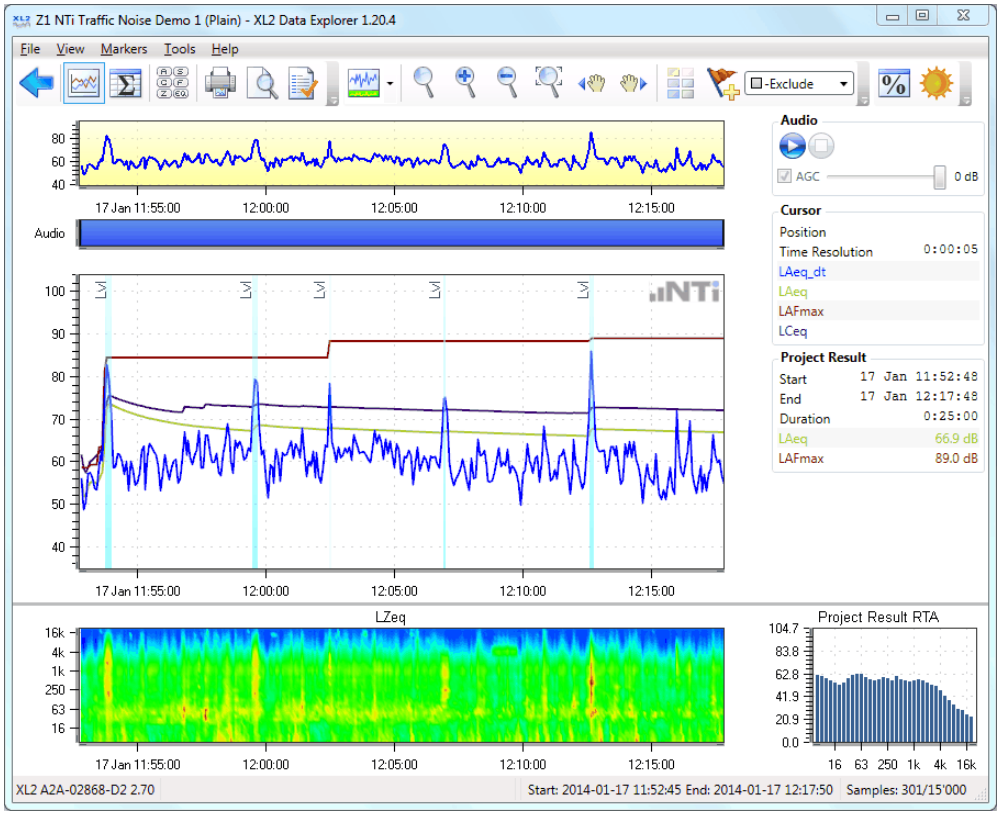

© 2015 NTi Audio AG, MBe

7. You may zoom into any area of the Main chart or Spectrogram: left-click+drag with the mouse over the area of interest. The zoom response is instantaneous. In addition, the Info section on the right-hand side of the Main chart shows the instantaneous levels at the current Cursor position, as well as the result of the whole project.

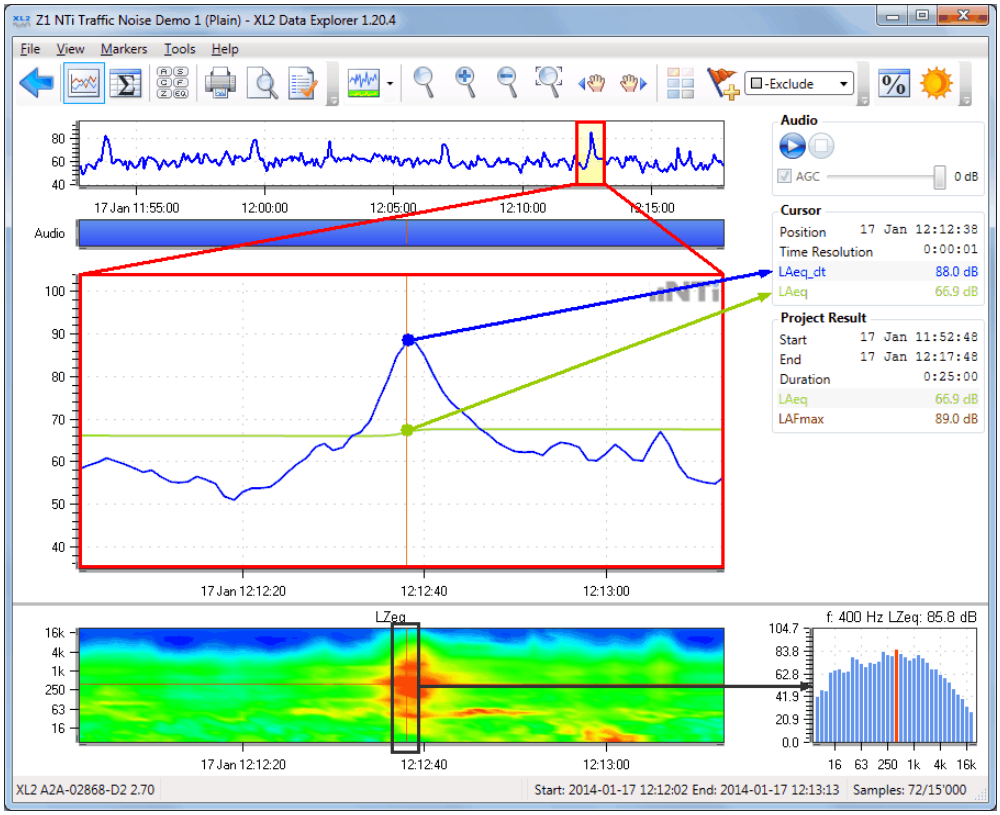

8. Click on the button , and then on to display the large RTA spectrum.

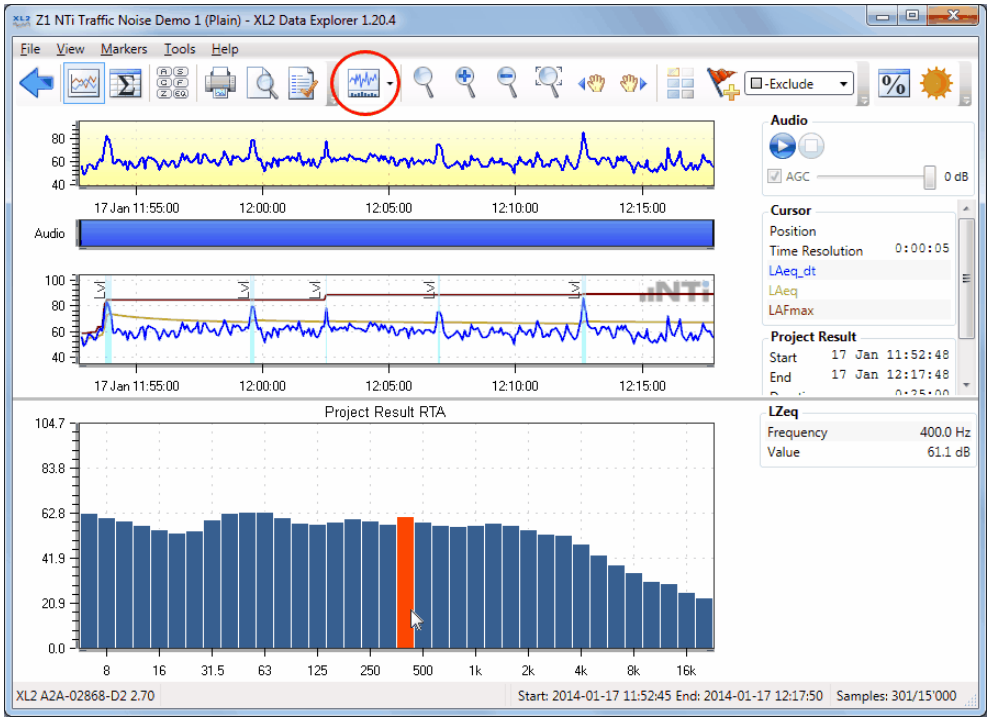

© 2015 NTi Audio AG, MBe

9. Select the menu 'View -> Setup Levels...' to choose which levels are displayed in the Main chart, and select the appropriate colors. Here you may also enable or edit the values of the correction factors (k1, k2).

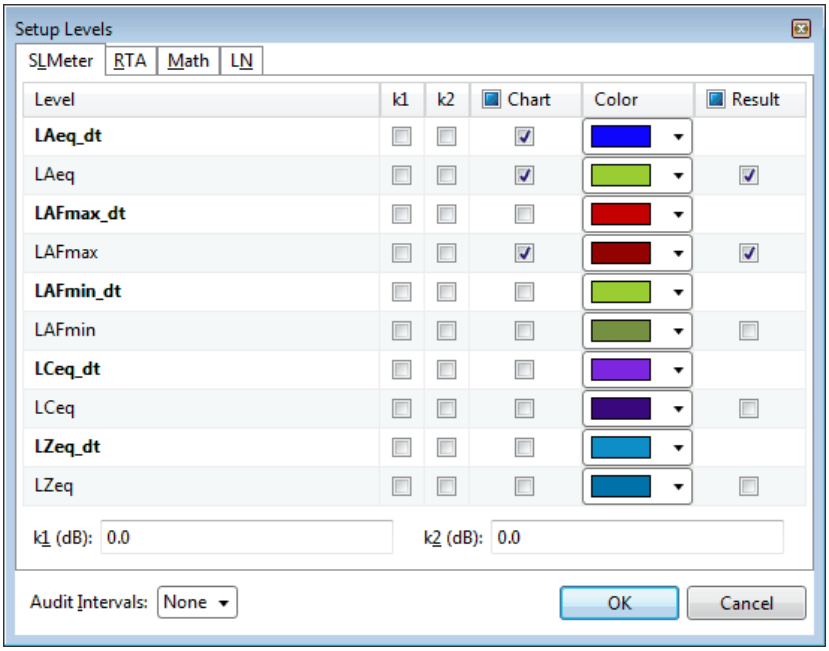

10. Listen to the sound recording to identify or further analyze an event; click on the corresponding point in the Audio bar to replay the sound.

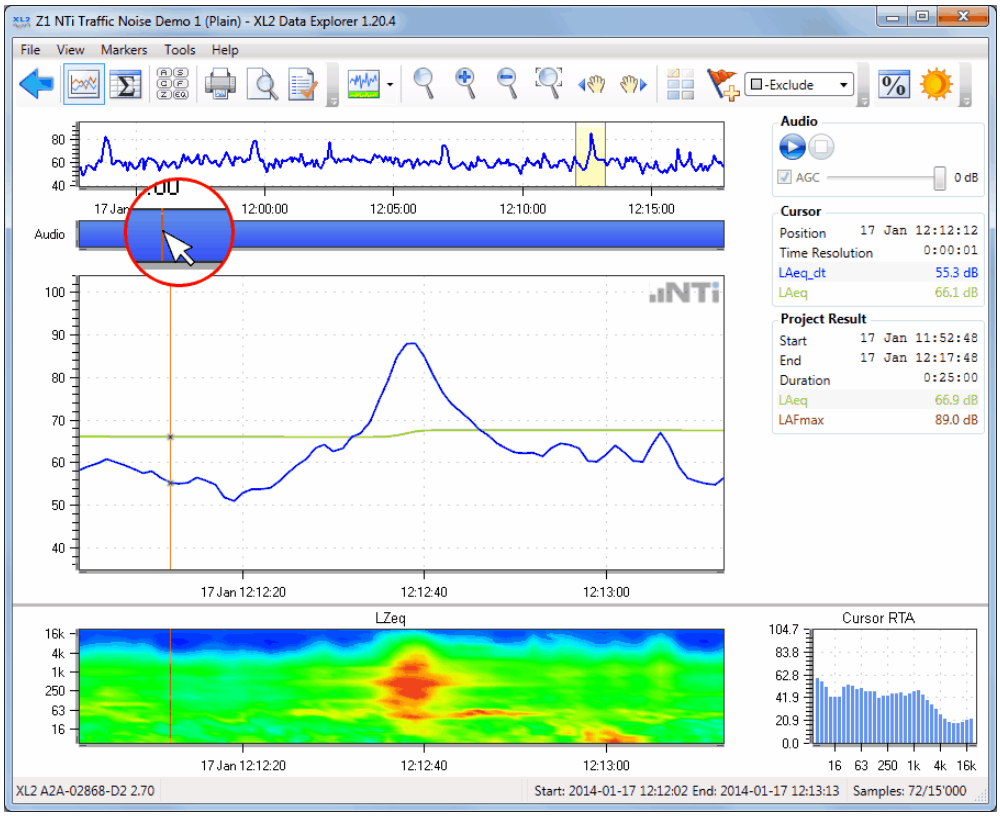

© 2015 NTi Audio AG, MBe

11. To highlight an area, or exclude it from the overall result calculation, add a Marker: first select the Marker type using the -Exclude button, click on the button, and then left-click+drag with the mouse over the Main chart to add the Marker.

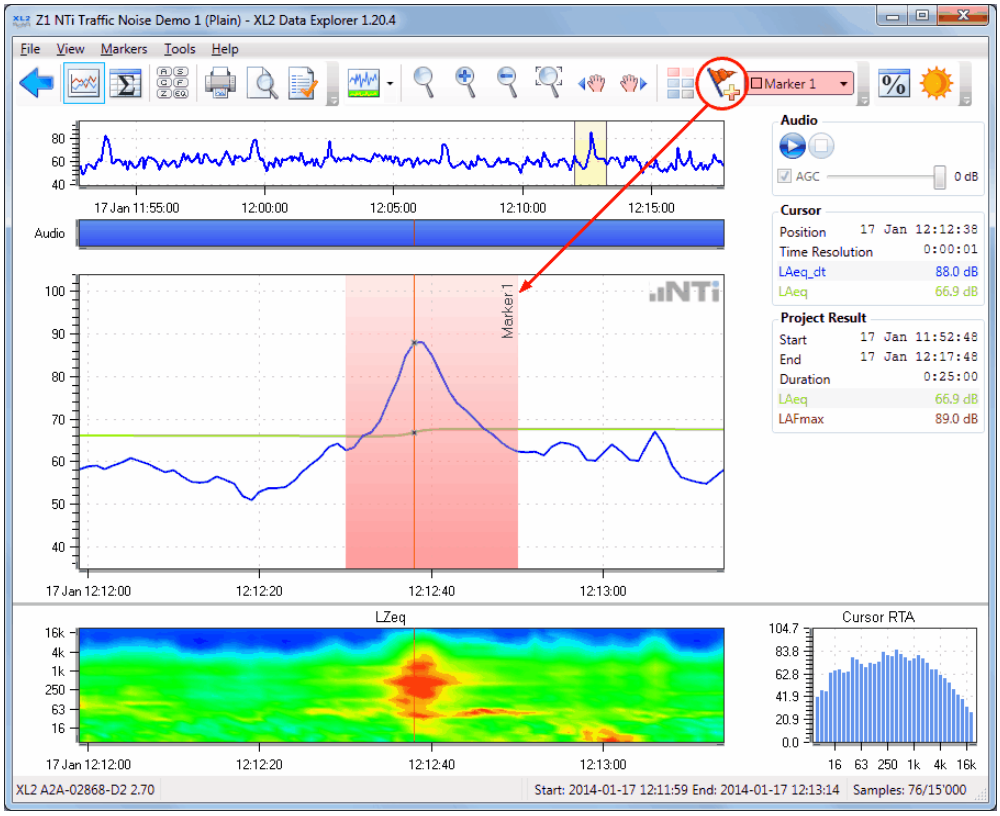

12. Click on % to open the Level statistics window, and then on Calculate... to show the statistical distribution of dt values in a graph, as well as the Percentile results in a table.

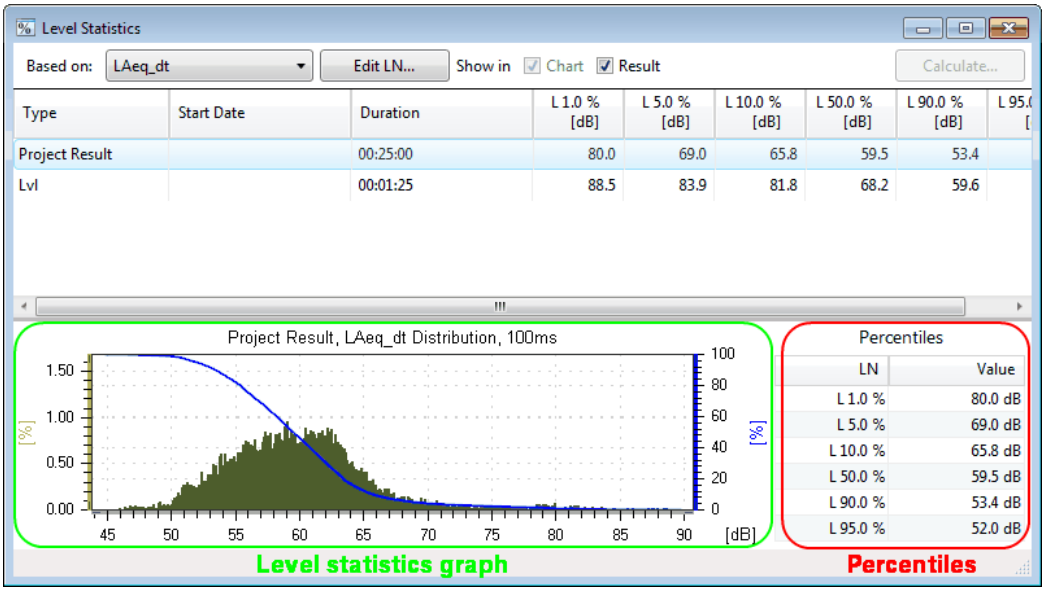

© 2015 NTi Audio AG, MBe

13. Click on to switch to the Result view, which provides an overview on the individual Marker data and the Project result (highlighted row). You may expand or collapse any of the Marker categories.

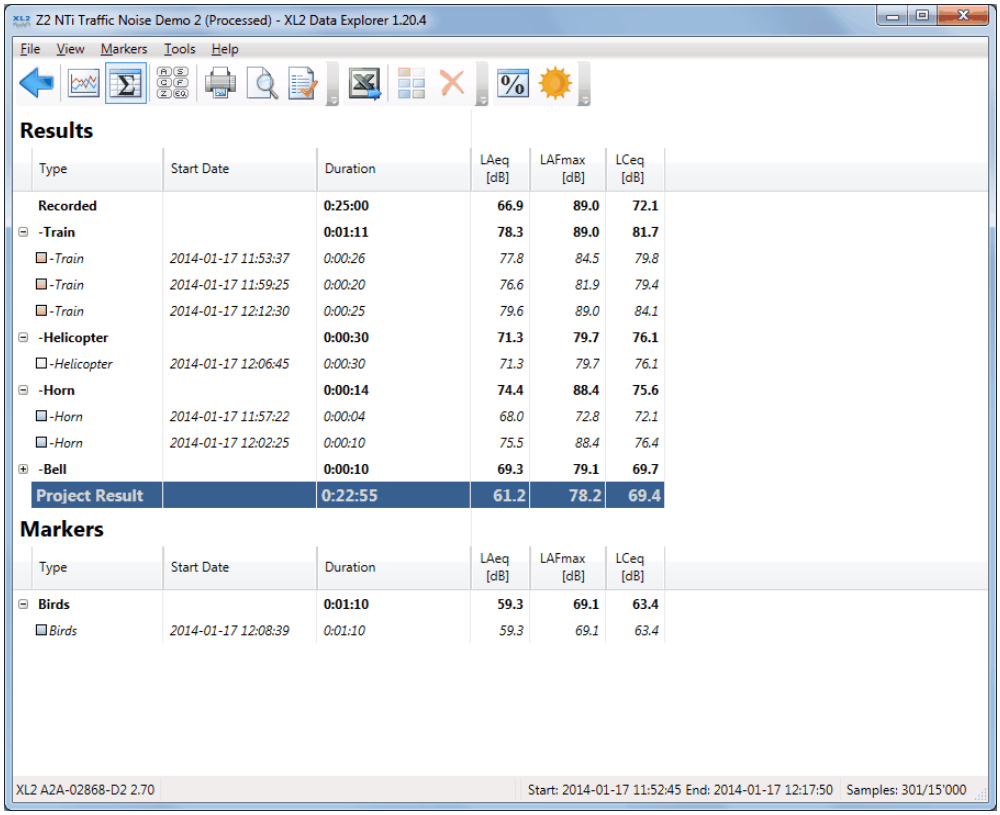

14. Click on to edit the Report properties: tick the checkboxes for the parts to be printed, edit the corresponding text and optionally Browse to add your own logo.

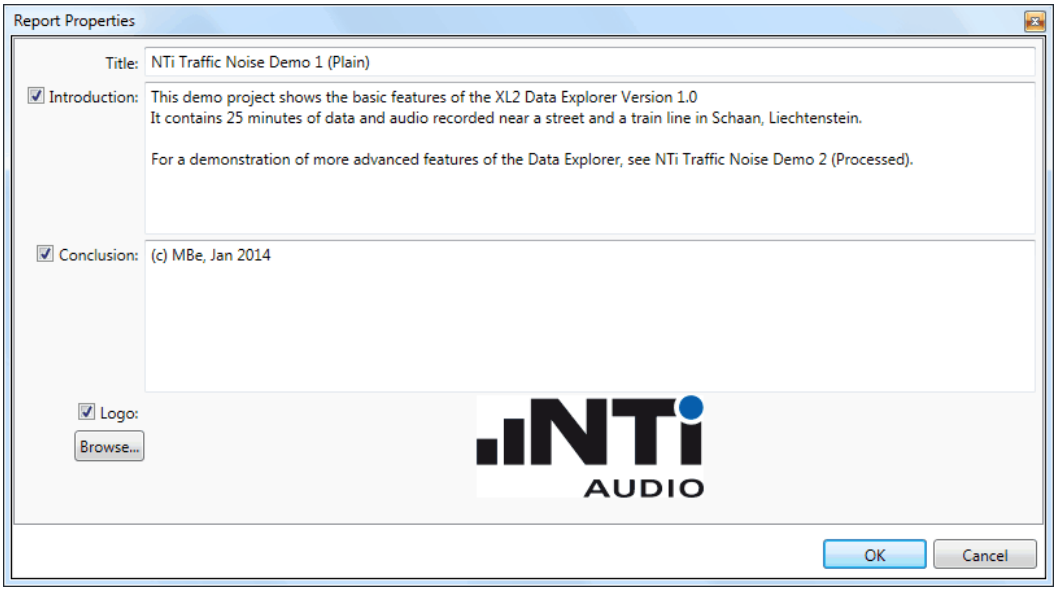
Report Properties
Title: NTi Traffic Noise Demo 1 (Plain)
Introduction: This demo project shows the basic features of the XL2 Data Explorer Version 1.0
It contains 25 minutes of data and audio recorded near a street and a train line in Schaan, Liechtenstein.
For a demonstration of more advanced features of the Data Explorer, see NTi Traffic Noise Demo 2 (Processed).
Conclusion: (c) MBe, Jan 2014
Logo:
Browse...
NTi AUDIO
OK
Cancel

© 2015 NTi Audio AG, MBe

15. Click on to verify the Print preview.

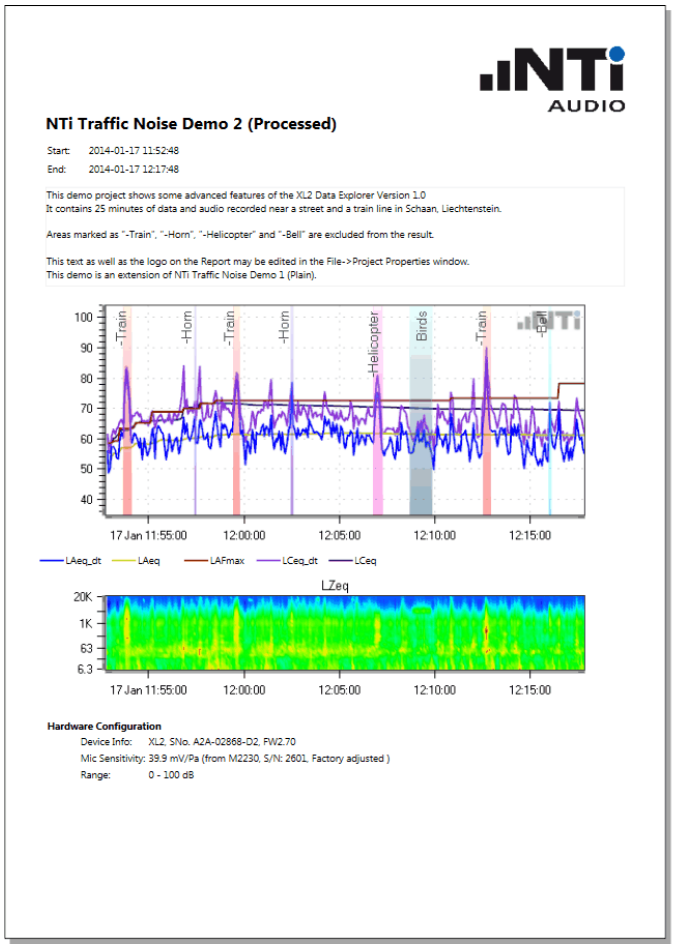

NTi Traffic Noise Demo 2 (Processed)

Start: 2014-01-17 11:52:48
End: 2014-01-17 12:17:48

This demo project shows some advanced features of the XL2 Data Explorer Version 1.0
It contains 25 minutes of data and audio recorded near a street and a train line in Schaan, Liechtenstein.

Areas marked as "-Train", "-Horn", "-Helicopter" and "-Bell" are excluded from the result.

This text as well as the logo on the Report may be edited in the File->Project Properties window.
This demo is an extension of NTi Traffic Noise Demo 1 (Plain).

Hardware Configuration
Device Info: XL2, SNo. A2A-02868-D2, FW2.70
Mic Sensitivity: 39.9 mV/Pa (from M2230, S/N: 2601, Factory adjusted)
Range: 0 - 100 dB

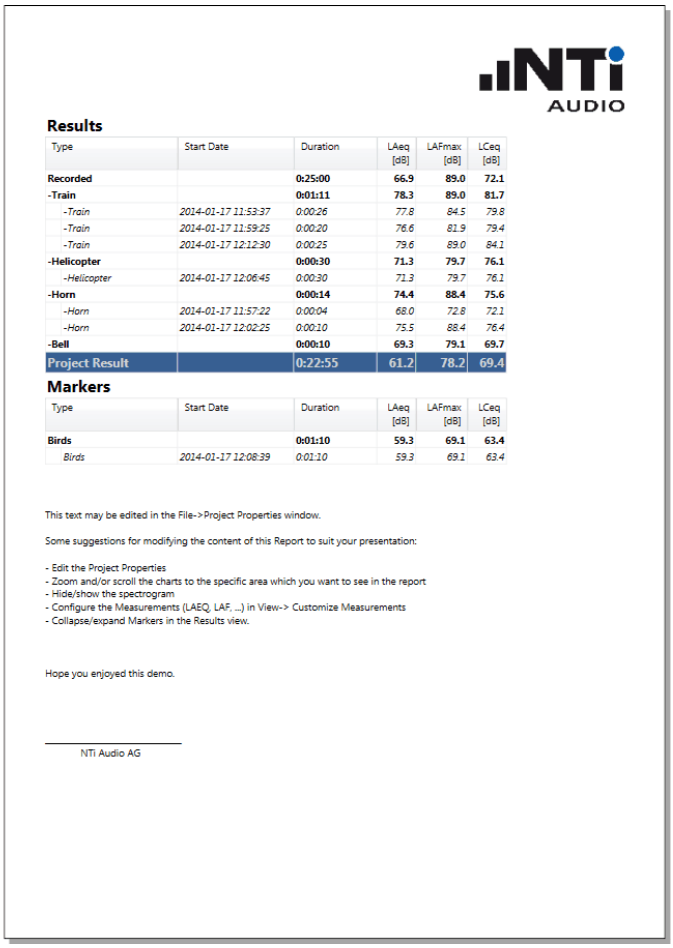

Results

Type	Start Date	Duration	LAeq [dB]	LAFmax [dB]	LCeq [dB]
Recorded		**0:25:00**	**66.9**	**89.0**	**72.1**
-Train		**0:01:11**	**78.3**	**89.0**	**81.7**
-Train	*2014-01-17 11:53:37*	*0:00:26*	*77.8*	*84.5*	*79.8*
-Train	*2014-01-17 11:59:25*	*0:00:20*	*76.6*	*81.9*	*79.4*
-Train	*2014-01-17 12:12:30*	*0:00:25*	*79.6*	*89.0*	*84.1*
-Helicopter		**0:00:30**	**71.3**	**79.7**	**76.1**
-Helicopter	*2014-01-17 12:06:45*	*0:00:30*	*71.3*	*79.7*	*76.1*
-Horn		**0:00:14**	**74.4**	**88.4**	**75.6**
-Horn	*2014-01-17 11:57:22*	*0:00:04*	*68.0*	*72.8*	*72.1*
-Horn	*2014-01-17 12:02:25*	*0:00:10*	*75.5*	*88.4*	*76.4*
-Bell		**0:00:10**	**69.3**	**79.1**	**69.7**
Project Result		**0:22:55**	**61.2**	**78.2**	**69.4**

Markers

Type	Start Date	Duration	LAeq [dB]	LAFmax [dB]	LCeq [dB]
Birds		**0:01:10**	**59.3**	**69.1**	**63.4**
Birds	*2014-01-17 12:08:39*	*0:01:10*	*59.3*	*69.1*	*63.4*

This text may be edited in the File->Project Properties window.

Some suggestions for modifying the content of this Report to suit your presentation:

- Edit the Project Properties
- Zoom and/or scroll the charts to the specific area which you want to see in the report
- Hide/show the spectrogram
- Configure the Measurements (LAEQ, LAF, ...) in View-> Customize Measurements
- Collapse/expand Markers in the Results view.

Hope you enjoyed this demo.

NTi Audio AG

16. Click on to print the report.

17. Click on to return to the Project view; this step automatically saves all project data, including your amendments.

© 2015 NTi Audio AG, MBe

1.4 License agreement

Scope

This End-User License Agreement (“EULA”) is a legal agreement between you (either an individual or a single entity) and NTi Audio AG (“NTi Audio”). By installing or using the NTi Audio software, content or documentation (collectively the “NTi Audio software”) accompanying this EULA, you accept these terms and are consequently bound to them. If you do not agree to the terms of this EULA, do not install or use the NTi Audio software.

The NTi Audio software is licensed, not sold, to you by NTi Audio for use only under the terms of this license agreement. This EULA only gives you some rights to use the software. You may use the software only as expressly permitted in this EULA.

This EULA also applies for all upgrades or updates to the NTi Audio software (if any), supplements, internet-based services, and support services for this NTi Audio software, unless other terms accompany those items. If so, those terms will govern.

License Uses and Restrictions

A. Software Installation: Subject to the terms and conditions of this license agreement, you are granted a limited, non-exclusive license to use and run the NTi Audio software. Data transfer from an XL2 Audio & Acoustic analyzer to the NTi Audio software is only enabled if the corresponding license is installed on the analyzer.

B. No Reverse Engineering: You may not and you agree not to, or to enable others to, copy (except as expressly permitted by this license agreement or by the usage rules if they are applicable to you), publish, distribute, decompile, reverse engineer, disassemble, attempt to derive the source code of, decrypt, modify, or create derivative works of the NTi Audio software or any services provided by the NTi Audio software, or any part thereof.

C. Termination: This license is effective until terminated. Your rights under this license agreement will terminate automatically or otherwise cease to be effective without notice from NTi Audio if you fail to comply with any term(s) of this license agreement. Upon the termination of this license, you must cease all use of the NTi Audio software and destroy all copies, full or partial, of the NTi Audio software.

Services

The NTi Audio software may enable access to NTi Audio and third party services and web sites (collectively and individually, “NTi Audio services”). Such NTi Audio services may not be available in all languages or in all countries. Use of these NTi Audio services requires internet access and use of certain NTi Audio services may requires an NTi Audio ID, may require you to accept additional terms and may be subject to additional fees. By using this software in connection with an NTi Audio ID or other NTi Audio account, you agree to the applicable terms of service for that account.

Disclaimer

A. NTi Audio and all our affiliates do not give any warranty, guarantee or conditions for this software, i.e. you bear the sole risk of using it. This limitation applies to anything related to this software, including breach of contract, warranty, guarantee or condition, strict liability, negligence or other tort to the extent permitted by applicable law. It also applies if NTi Audio knew or should have known about the possibility of the damages.

B. The NTi Audio software and services are provided “as-is”, i.e. with all faults. You bear the sole risk of using it. NTi Audio gives no express warranties, guarantees or conditions. NTi Audio excludes the implied warranties of merchantability, fitness for a particular purpose and non-infringement.

C. You acknowledge that the NTi Audio software and services are not intended or suitable for use in situations or environments where the failure or time delays of, or errors or inaccuracies in the content, data or information provided by the NTi Audio software or services could lead to death, personal injury, or severe physical or environmental damage, including without limitation the operation of nuclear facilities, aircraft navigation or communication systems, air traffic control, life support or weapons systems.

D. No oral or written information or advice given by NTi Audio or an NTi Audio authorized representative shall create a warranty. Should the NTi Audio software or services prove defective, you assume the entire costs of all necessary servicing, repair or correction.

© 2015 NTi Audio AG, MBe

E. In no event shall NTi Audio be liable for personal injury, or any incidental, special, indirect or consequential damages whatsoever, including, without limitation, damages for loss of profits, loss of data or information, business interruption or any other commercial damages or losses, arising out of or related to your use or inability to use the NTi Audio software or services or any third party software or applications in conjunction with the NTi Audio software or services, however caused, regardless of the theory of liability (contract, tort or otherwise) and even if NTi Audio has been advised of the possibility of such damages. In no event shall NTi Audio's total liability to you for all damages exceed the amount of ten US dollars (USD 10.00). The foregoing limitations will apply even if the above stated remedy fails of its essential purpose.

Separate Provisions

If any provision of this EULA shall be held to be invalid, illegal or unenforceable, the validity, legality and enforceability of the remaining provisions shall in no way be affected or impaired thereby.

Privacy

At all times your information will be treated in accordance with NTi Audio's privacy policy, which is incorporated by reference into this license agreement and can be viewed at http://www.nti-audio.com/privacy-statement

Controlling Law

This license agreement will be governed and construed in accordance with the laws of Liechtenstein, Europe, excluding its conflict of law principles. No amendment to or modification of this EULA will be binding unless in writing and signed by NTi Audio. The English version of this EULA shall govern, to the extent not prohibited by local law in your jurisdiction.

© 2015 NTi Audio AG, MBe

Part II

2 Project view

The Data Explorer always starts up in the Project view. The Project view is also accessible from the Chart or Result views by clicking the button.

- After the initial installation, the Project view shows the 'Demo Projects' folder.
- From then on, it always opens the same folder that had been selected the last time.

NOTE **The XL2 unit must have a Data Explorer Option installed to allow the direct import of XL2 Test files to the Data Explorer software.**

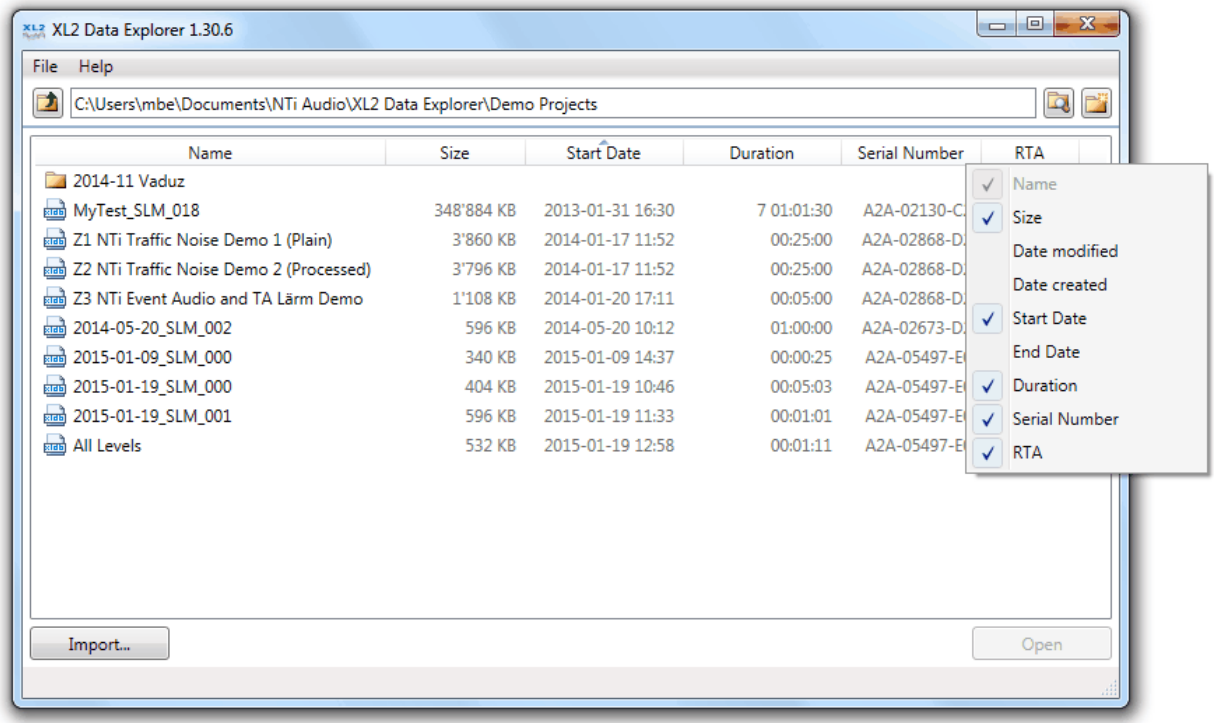
XL2 Data Explorer 1.30.6
File Help
C:\Users\mbe\Documents\NTi Audio\XL2 Data Explorer\Demo Projects
Name Size Start Date Duration Serial Number RTA
2014-11 Vaduz
MyTest_SLM_018 348'884 KB 2013-01-31 16:30 7 01:01:30 A2A-02130-C
Z1 NTi Traffic Noise Demo 1 (Plain) 3'860 KB 2014-01-17 11:52 00:25:00 A2A-02868-D
Z2 NTi Traffic Noise Demo 2 (Processed) 3'796 KB 2014-01-17 11:52 00:25:00 A2A-02868-D
Z3 NTi Event Audio and TA Lärm Demo 1'108 KB 2014-01-20 17:11 00:05:00 A2A-02868-D
2014-05-20_SLM_002 596 KB 2014-05-20 10:12 01:00:00 A2A-02673-D
2015-01-09_SLM_000 340 KB 2015-01-09 14:37 00:00:25 A2A-05497-E
2015-01-19_SLM_000 404 KB 2015-01-19 10:46 00:05:03 A2A-05497-E
2015-01-19_SLM_001 596 KB 2015-01-19 11:33 00:01:01 A2A-05497-E
All Levels 532 KB 2015-01-19 12:58 00:01:11 A2A-05497-E
Name
Size
Date modified
Date created
Start Date
End Date
Duration
Serial Number
RTA
Import...
Open

Projects view with imported projects sorted by recording date, and right-click context menu

Hint ***Click on any column title to sort the projects in ascending or descending order. Right-click on any column title to amend the selection of displayed columns.***

Direct actions

- Import project: click on and select an XL2 file (*.XL2)
- Open project:
  - double-click on project name
  - select a project and press Ctrl+O
  - select a project and click on 
- Delete: select a project or folder and press Del (NOTE - All contents of the folder will be deleted!)
- Rename: select a project or folder and press F2
- Refresh the list of projects: press F5
- Organize the projects in ascending or descending order: click on the preferred column title
- Arrange the columns by moving them with the mouse to the preferred position

© 2015 NTi Audio AG, MBe

- Copy to: right-click on a project and select 'Copy To...'
- New folder: right-click in the Project view and select 'New Folder...'
- Up one folder level: click on
- Change working folder: click on
- Create new folder: click on

Save project

All amendments to an open project (e.g. Markers, layout of the Chart view or Result view) are automatically saved. Furthermore, upon returning to the Project view, the project file (*.xldb) is closed. Consequently, if you want to restore a previous project status, you may either

- manually undo every amendment,
- or restore an older version of the project file on your PC.

Copy project

You can copy & paste a Data Explorer project e.g. to another location, and open the copy if the PC has the XL2 Data Explorer software installed.

© 2015 NTi Audio AG, MBe

2.1 Data import

Data flow

There are two different ways to import logged data from a XL2 to the Data Explorer software.

A. Test files that were recorded on an XL2 with the Data Explorer Option installed on the XL2 device at the time of recording the data, can be imported directly to the Data Explorer software.

B. Test files that were recorded on an XL2 without the Data Explorer Option installed on the XL2 device at the time of recording the data ("Legacy data"), require an internet connection in order to be imported to the Data Explorer software.

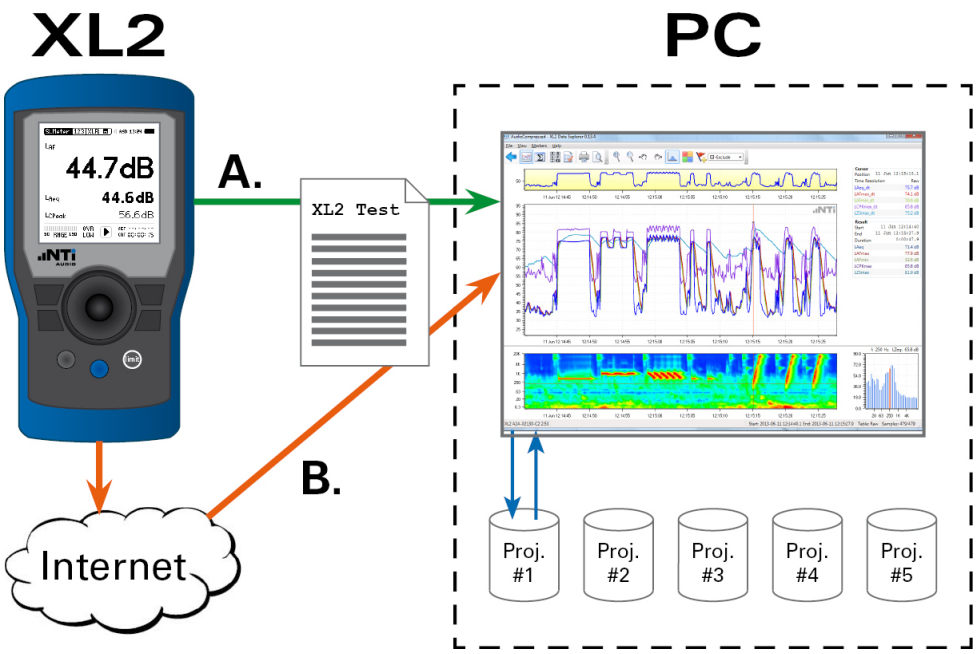

Data import procedures

NOTE **The XL2 Data Explorer allows the import of XL2 log files, regardless in which mode they have been recorded; however, this does not include the "cycle results" that were acquired in the 'Repeated Timer' mode.**

© 2015 NTi Audio AG, MBe

Import procedure

1. Define the Y-axis and percentile preferences for imported files (optional).

2. Connect the XL2 to your PC with the Data Explorer software via the USB interface, or insert the SD-card into a card reader, and copy the required XL2 test files to the hard disk.

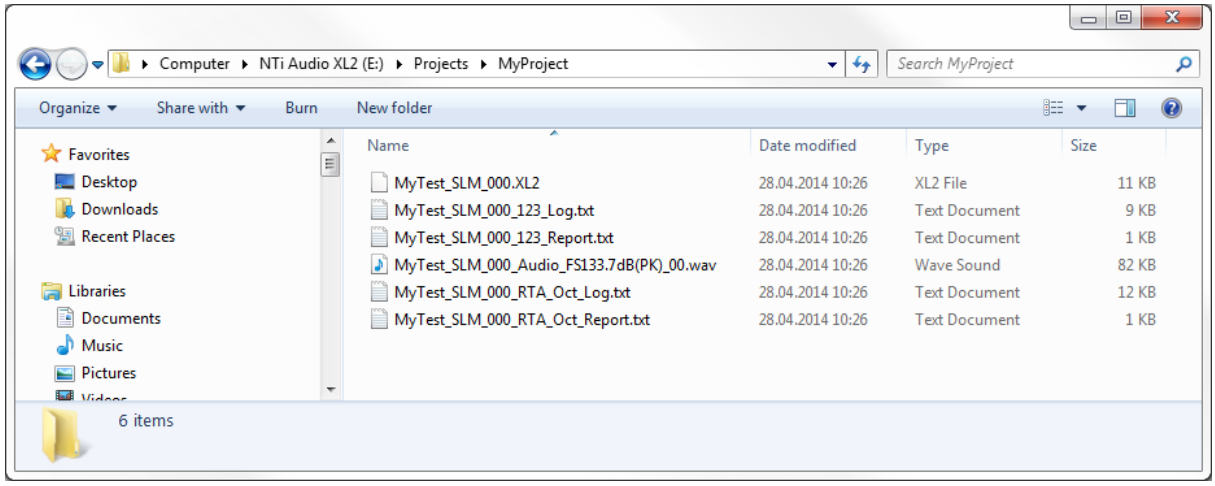

Example of XL2 Test files with continuous audio file

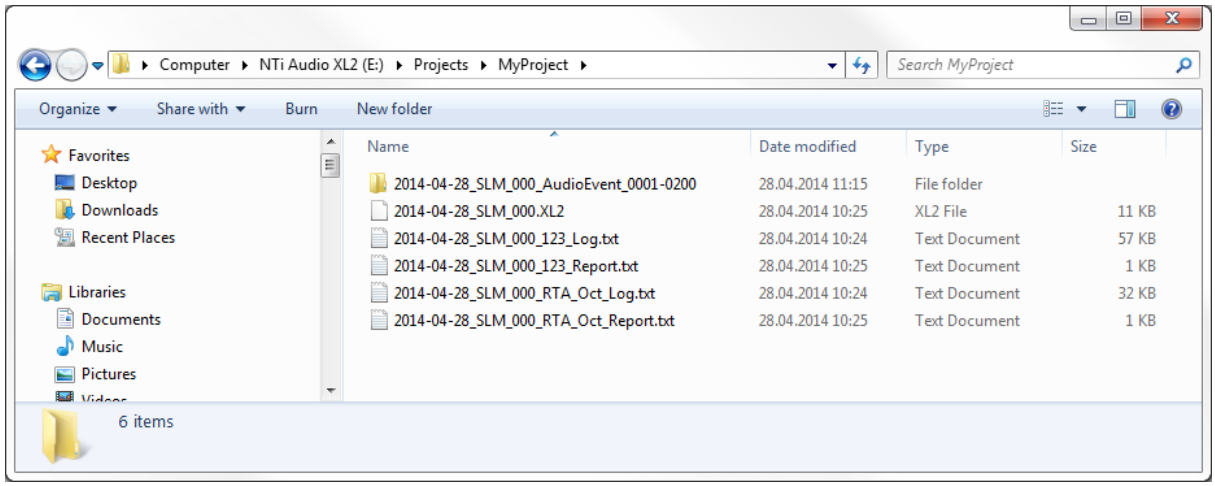

Example of XL2 Test files with segmented audio files

3. Click on the 'Import' button in the Project view and select the *.xl2 test file to be imported.

Hint ***It is strongly recommended that you copy the XL2 test files to the PC hard disk first, and then import them into the Data Explorer.***

© 2015 NTi Audio AG, MBe

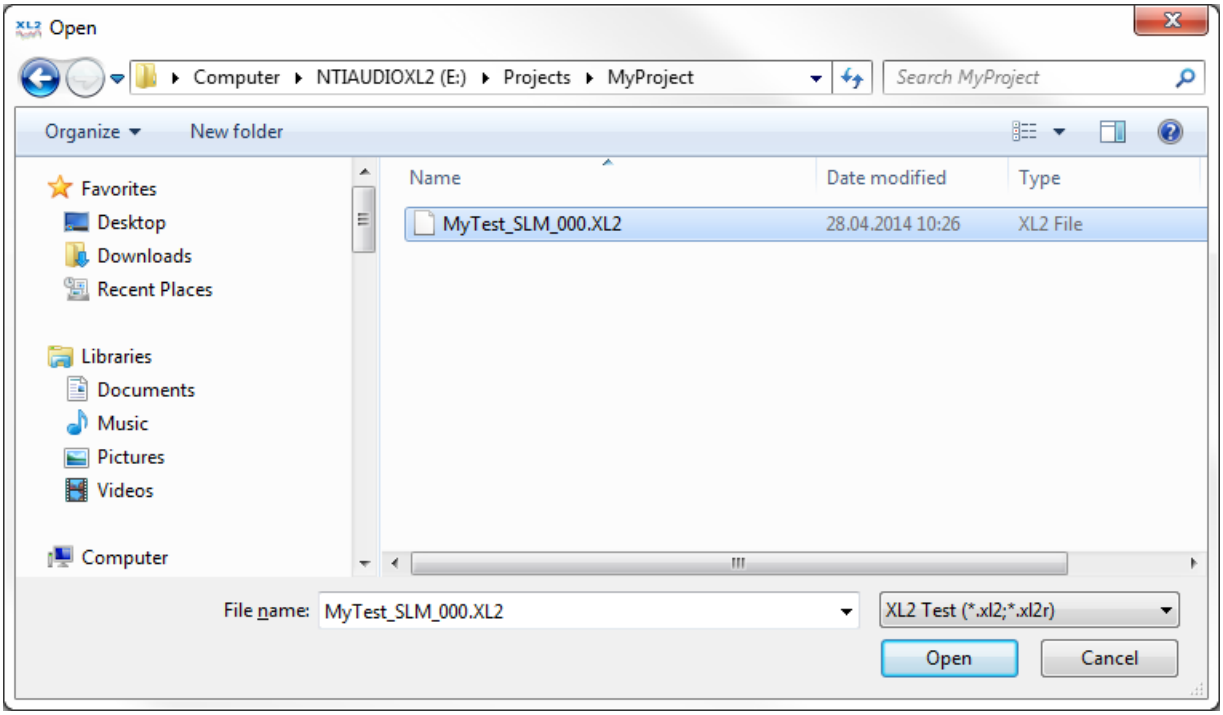

Select XL2 Test file

Hint ***It is recommended to keep a backup of the imported XL2 Test files or the converted XL2 Data Explorer files in case of loss of data.***

© 2015 NTi Audio AG, MBe

2.2 Preferences

The 'Preferences' feature allows you to customize some default settings according to your demands, e.g. the displayed level or RTA curves, the Main chart Y-axis scale, the default percentiles or the Day Night Level periods.

The customized default settings

a) are automatically applied on all XL2 projects that are subsequently imported,

b) may be applied individually by manual interaction on selected older XL2 projects.

To define the default settings, select the menu 'File → Preferences...' in the Project view.

a) Select 'Setup Levels' and 'SLMeter', clear the 'Chart' checkbox and tick the level measurements or results that shall be displayed by default.

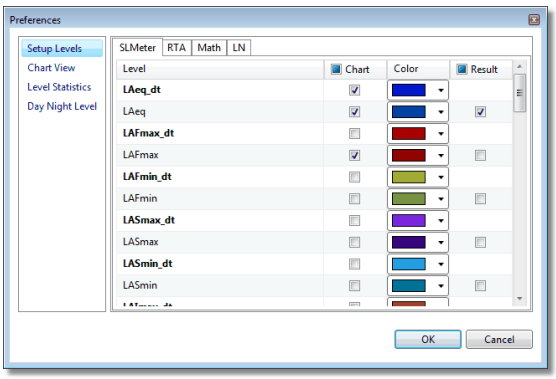

b) Select 'Setup Levels' and 'RTA', clear the 'Chart' checkbox and tick the 1/3rd octave measurements or results that shall be displayed by default.

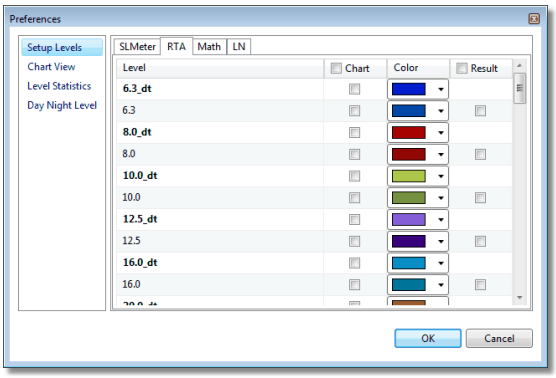

c) Select 'Setup Levels' and 'Math', clear the 'Chart' checkbox and select the SLMeter or RTA calculation results that shall be displayed by default.

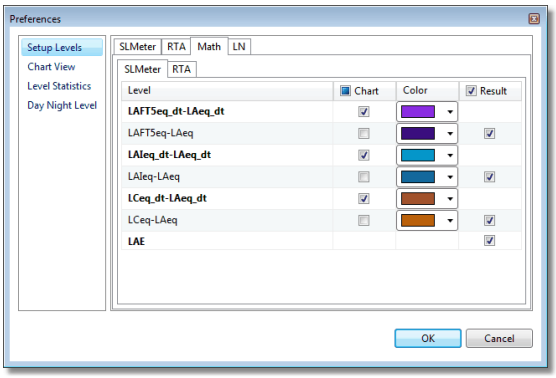

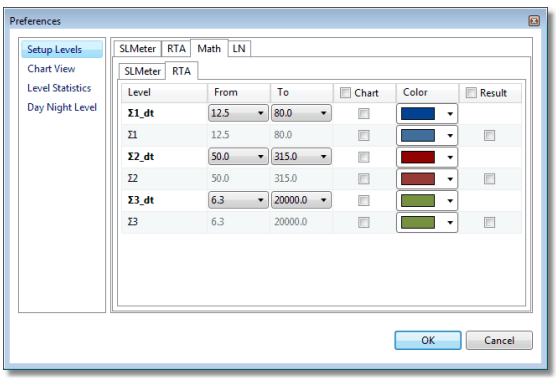

© 2015 NTi Audio AG, MBe

d) Select 'Setup Levels' and 'LN', clear the 'Chart' checkbox and select the Level Statistics that shall be displayed by default.

Hint ***The 'Preferences' settings are limited to seven percentiles.***

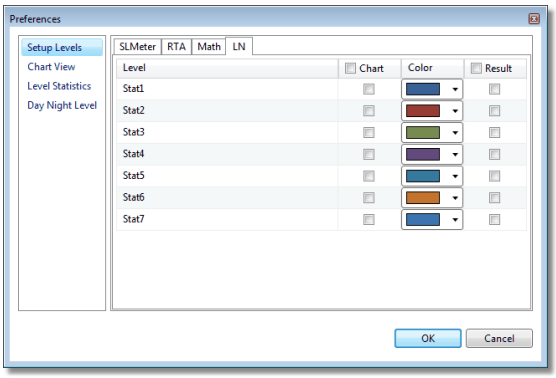

e) Select 'Chart View', clear the 'Auto' checkbox and enter the Minimum and Maximum dB values for the lower and upper ends of the Y-axis.

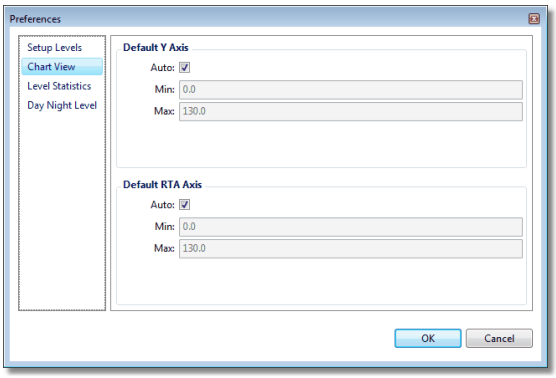

f) Select 'Level Statistics' and press



to edit the percentiles that shall be calculated and displayed by default, and/or edit the scaling of the graph axes.

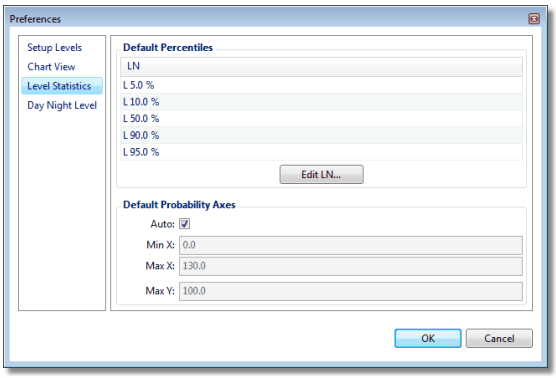

g) Select 'Day Night Level' and the edit the time scheme or penalties according to your demands.

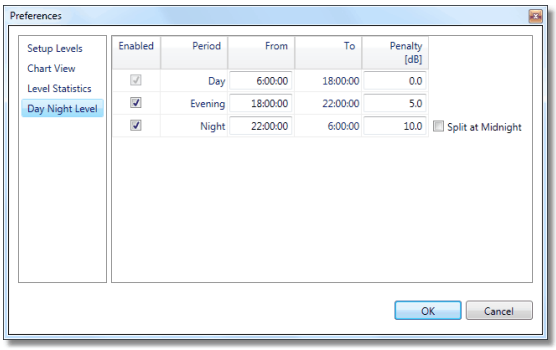

Hint ***Changes of the preference settings are applied on all XL2 log files that are subsequently imported. The preferences of older projects may be updated individually via the Setup Levels panel, the Zoom panel, the Edit percentiles panel or the Day Night Level panel.***

© 2015 NTi Audio AG, MBe

2.3 Project info

As soon as an XL2 test file has been imported to the Data Explorer, it becomes a Data Explorer Project with the following content:

- Logged level data
- Recorded audio file (if applicable)
- Project info (see below)
- Events (Markers) created by the XL2 or by the user from within the Data Explorer
- Report properties
- List of level measurements
- Expansion level / layout of Result view (also after exit & re-enter)

Hint ***To re-establish the original status of a Data Explorer Project after you have amended the data, simply re-import the *.XL2 Test file***

Project Info pop-up

In the Chart or Result view, you may move the cursor to the left bottom corner of the XL2 Data Explorer window to open the Project Info pop-up.

The Project Info pop-up contains the following list of **non-editable** information.

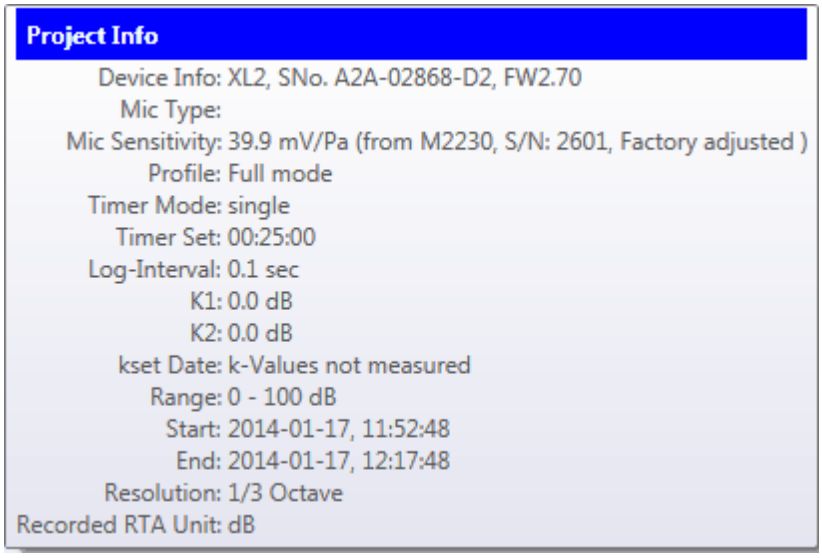

Project info pop-up (example)

Hint ***Please refer also to chapter Report properties***

© 2015 NTi Audio AG, MBe

Part

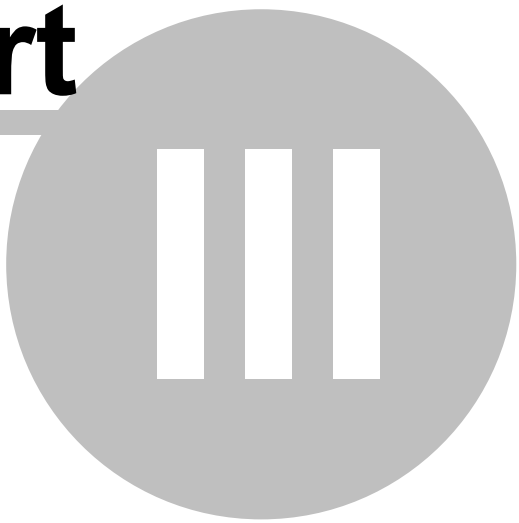

3 Chart view

The chart view contains the Overview chart, Audio bar & player, Main chart & info section, Spectrogram with RTA spectrum and the Project info.

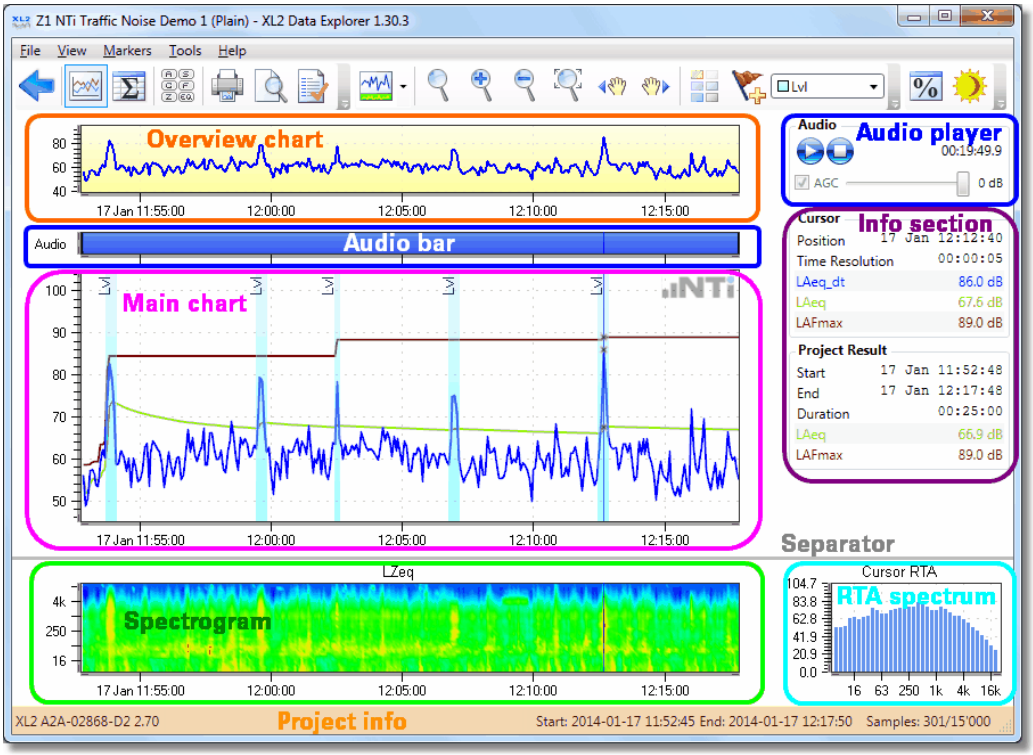

Default chart view

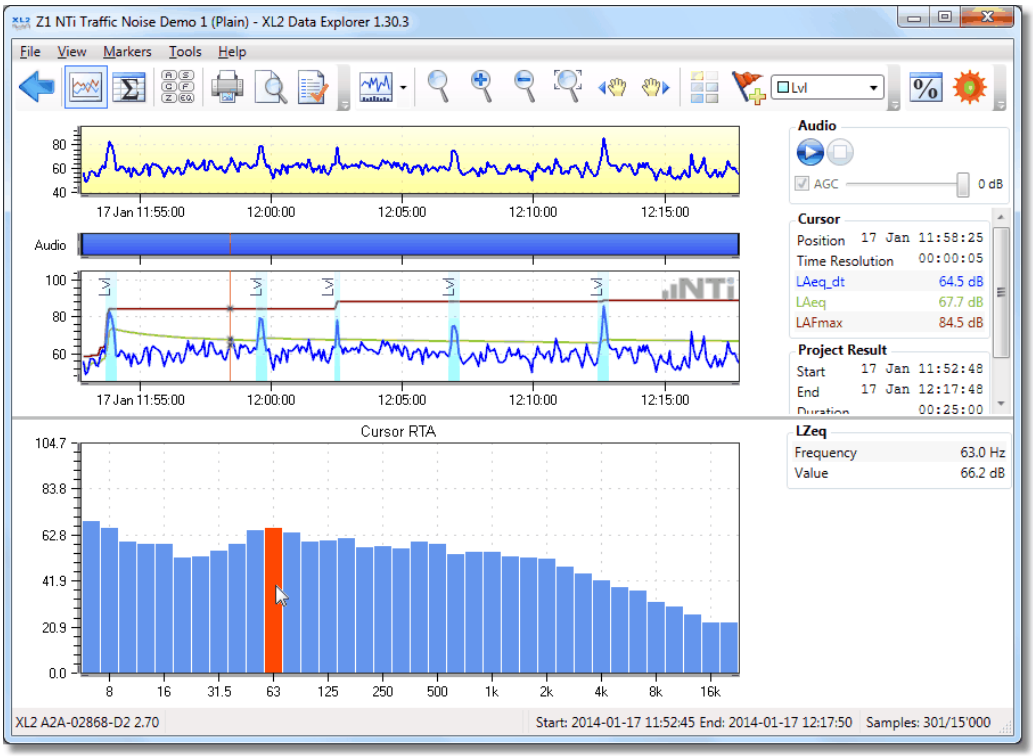
Z1 NTi Traffic Noise Demo 1 (Plain) - XL2 Data Explorer 1.30.3
File View Markers Tools Help
Cursor RTA
XL2 A2A-02868-D2 2.70
Start: 2014-01-17 11:52:45 End: 2014-01-17 12:17:50
Samples: 301/15'000

Chart view with large RTA spectrum

© 2015 NTi Audio AG, MBe

Buttons

Icon	Description
	Return to Project view
	Switch to Chart view
	Switch to Result view
	Select the levels to be displayed
	Print the project report
	Preview the project report
	Open the Report properties
	Change the layout of the chart view: Main chart only / with Spectrogram / with large RTA spectrum
	Zoom by Date Time
	Zoom In
	Zoom Out
	Zoom All out
	Pan left
	Pan right
	Edit the name, function or color of the Markers
	Add a Marker
	Select the type of a new Marker
	Open the Level statistics window
	Open the Day Night Level window

© 2015 NTi Audio AG, MBe

Time axes

The time axes always show the absolute date & time as recorded by the XL2 at the time when the level data was acquired.

- The time axis of the Overview chart always shows the full recorded period.
- The time axis of the Audio bar, Main chart and Spectrogram automatically adapts to the current zoom range.

Separator

The separator line between the Main chart and the Spectrogram can be shifted vertically, adjusting the height of the graphs.

Project info

A pop-up with the Project info opens as soon as the cursor is moved over the XL2 serial number / firmware version in the left bottom corner of the Chart view.

© 2015 NTi Audio AG, MBe

3.1 Overview chart

The Overview chart provides a permanent view of the full recorded period.

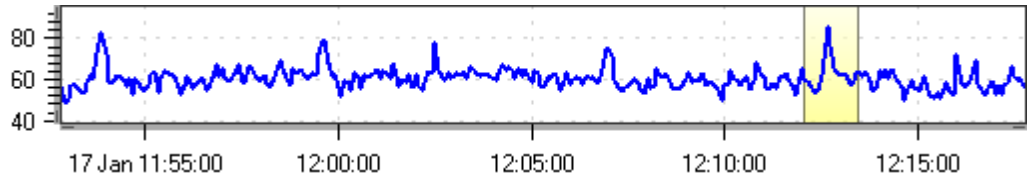

Overview chart with highlighted zoom range

The level curve that is displayed by default is, if available, the LAeq. Otherwise, it's the first level measurement data recorded in the log of the XL2 Test file.

The yellow background of the Overview chart indicates the area that is currently displayed in the Audio bar, Main chart and Spectrogram. If you zoom in to an area in the Main chart, the area will be highlighted in yellow in the Overview chart.

- The time axis of the Overview chart always shows the full recording period.
- The time axis of the Audio bar, Main chart and Spectrogram cover the currently displayed (i.e. zoomed) recording period only.

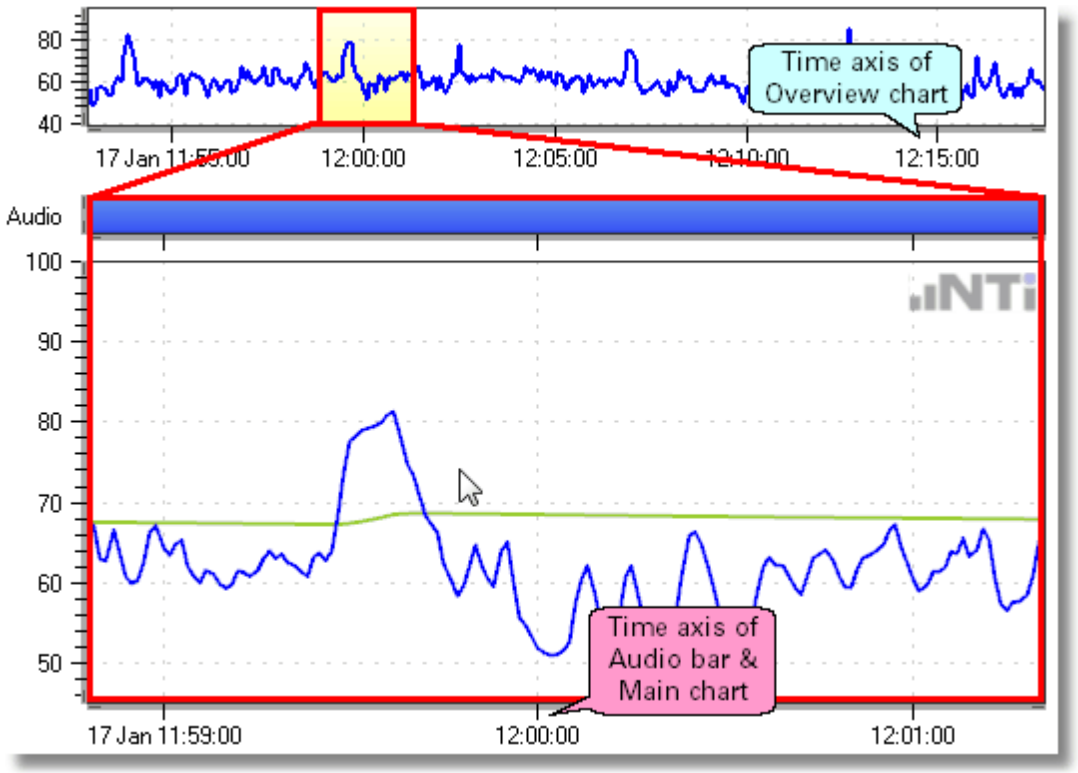

Example of Overview chart, Audio bar and Main chart

© 2015 NTi Audio AG, MBe

3.2 Audio bar & player

NOTE **The Audio bar is only shown if the audio log was switched on in the XL2 at the time of data acquisition.**

Example of a continuous Audio bar

Example of a segmented Audio bar

The Audio bar is normally continuous, but can also be segmented. For example, if the XL2 'Log Audio' mode was switched to 'Events Only'. Furthermore, longer audio recordings will be concatenated, as the maximum file size for an audio log is restricted to approx. 500 MB (= 1 hour full audio, or 12 hours compressed audio).

The area displayed in the Audio bar always corresponds to the content of the Main chart (i.e. the zoomed area). The vertical lines below the Audio bar consequently refer to the time scale of the Main chart, too.

There are three ways to listen to the recorded audio file.

a. To replay the audio file, you may
   - click on the desired position in the audio bar, or
   - right-click on the Audio bar, the Main chart or the Spectrogram and select 'Play from here', or
   - click on the button of the Audio player.

b. To pause the audio file replay,
   - press the 'Space' bar, or
   - right-click on the Audio bar, the Main chart or the Spectrogram and select 'Pause', or
   - click on the button of the Audio player.

c. Stop the audio file replay by
   - pressing the 'Esc' button, or
   - right-clicking on the Audio bar, the Main chart or the Spectrogram and select 'Stop', or
   - clicking on the button of the Audio player.

Right-click context menu

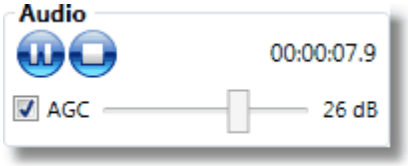

Audio player

You may switch off the AGC (Automated Gain Control), and manually adjust the gain. However, please note that in this mode the Audio player may still reduce the gain to avoid clipping.

Hint ***The AGC cannot be switched off if the XL2 audio file was recorded in the mode 'Compressed+AGC'.***

You may access the WAV file(s) behind the Audio bar (segments). To do so, right-click on the requested segment and select 'Browse to ...'.

Alternatively, you may also hover over the time indicator in the Audio player to read the file path of the related WAV file.

© 2015 NTi Audio AG, MBe

3.3 Setup Levels

Click on the button or press Ctrl + L to select the sound levels, math results and level statistics to be displayed in the Chart view and Result view respectively.

Hint ***The displayed levels are selected independently for the Chart and the Result view.***

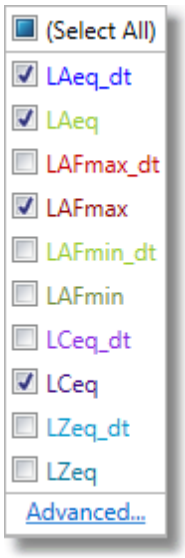

Example of available levels in Chart view

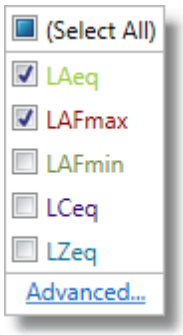

Example of available levels in Result view

Click on 'Advanced...', to open the 'Setup Levels' panel, which provides access to more settings.

a) Sound levels

- Tick the ☑ checkbox to select ☑ (i.e. display) or deselect ☐ all level or RTA curves and results in the corresponding view.
- Tick the particular checkboxes of the levels, RTA spectra or correction factors k1, k2 that shall be displayed.
- Edit the values of the correction factors k1, k2.

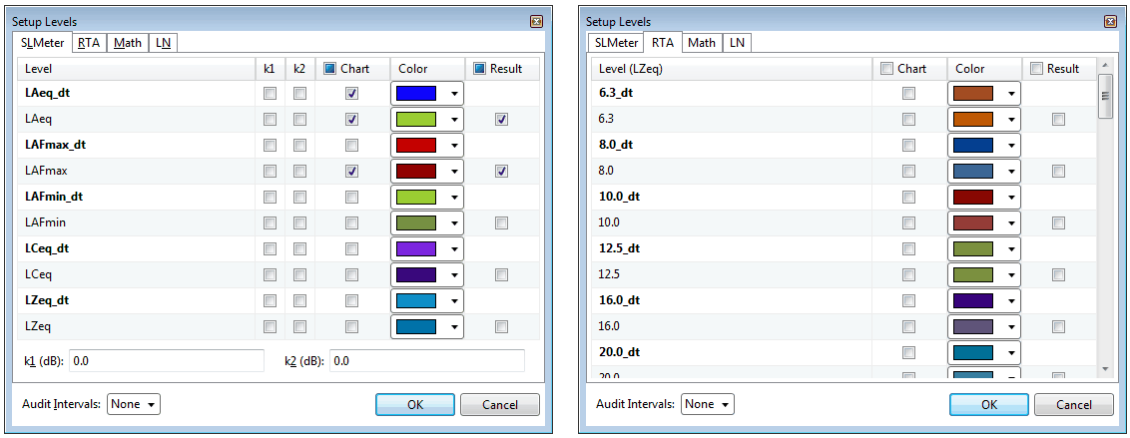

Setup Levels panel, tabs 'SLMeter' and 'RTA'

Hint ***Activate an Audit Interval if required (optional)***

© 2015 NTi Audio AG, MBe

Hint ***By right-clicking on the 'SLMeter' or 'RTA' Setup Levels panel you may***
a) apply the current default settings,
b) select all _dt values in the list,
c) deselect all _dt values in the list.

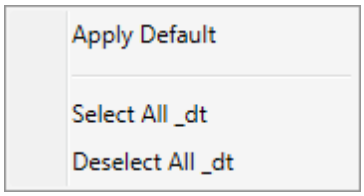

b) Math results

- Tick the ☐ checkbox to select ☑ (i.e. display) or deselect ☐ all math results in the corresponding view.
- Tick the particular checkboxes of the math results that shall be displayed.

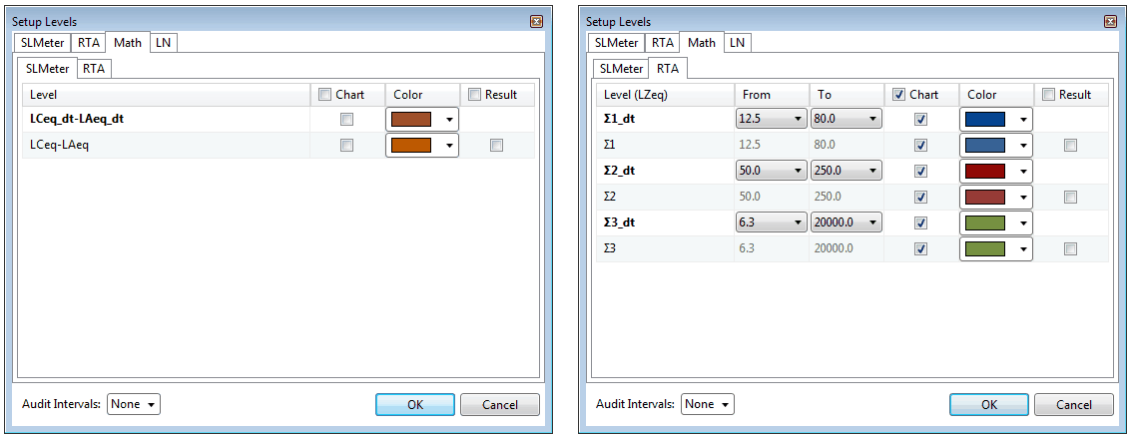

Setup Levels panel, tabs 'Math / SLMeter' and 'Math / RTA'

NOTE **'Math' values are only available if the corresponding raw data have been logged in the XL2 project.**

c) Level statistics

- Tick the ☐ checkbox to select ☑ (i.e. display) or deselect ☐ all level statistics in the corresponding view.
- Tick the particular checkboxes of the level statistics that shall be displayed.

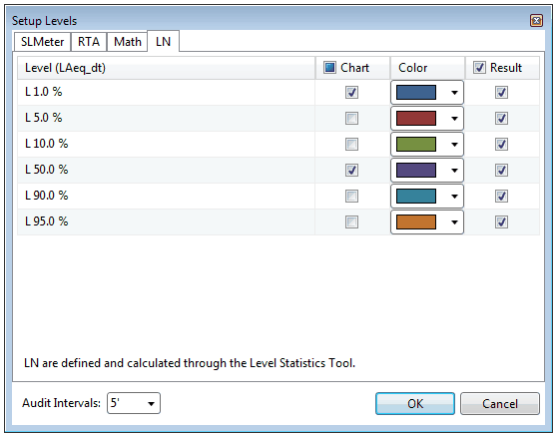

Setup Levels panel, 'LN' (level statistics)

© 2015 NTi Audio AG, MBe

3.4 Audit Intervals

The 'Audit Intervals' feature allows to divide the log data in measurement intervals (segments) of selectable length. These intervals are always synchronized with the time of the day.

For instance, the 15' audit interval would divide a recording from 08:12 to 09:05 into following intervals: 08:12 → 08:15 → 08:30 → 08:45 → 09:00 → 09:05.

The selected measurement results are then displayed for every interval in the Main chart and in the Result view.

Hint ***The 'Audit Intervals' feature is available regardless in which mode the data had been logged on the XL2.***

To activate the 'Audit Intervals' feature, open the 'Setup Levels' panel, select the required interval duration and press 'OK'.

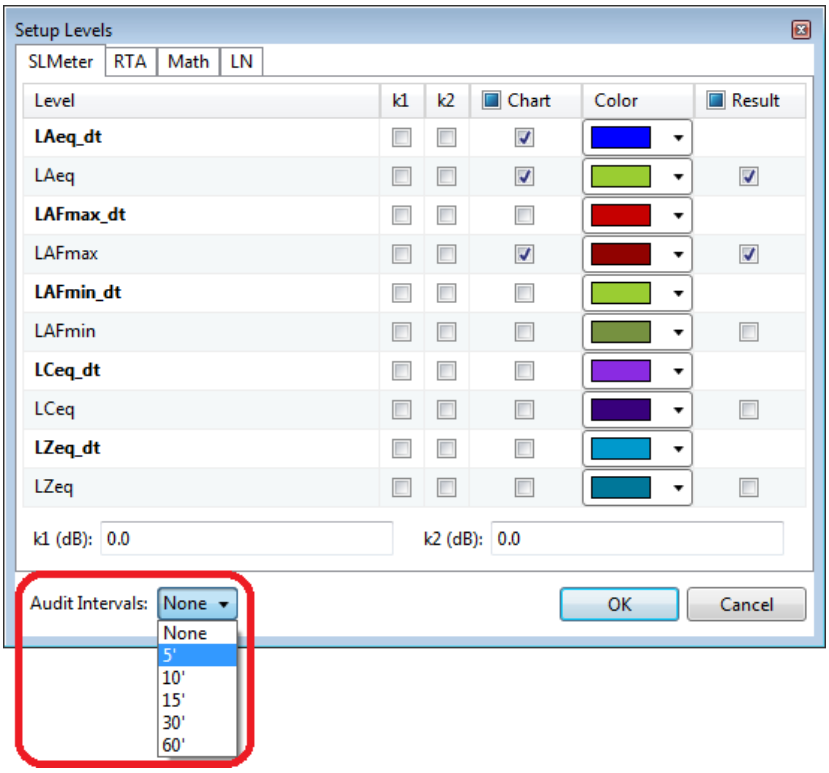

Selection of audit interval

© 2015 NTi Audio AG, MBe

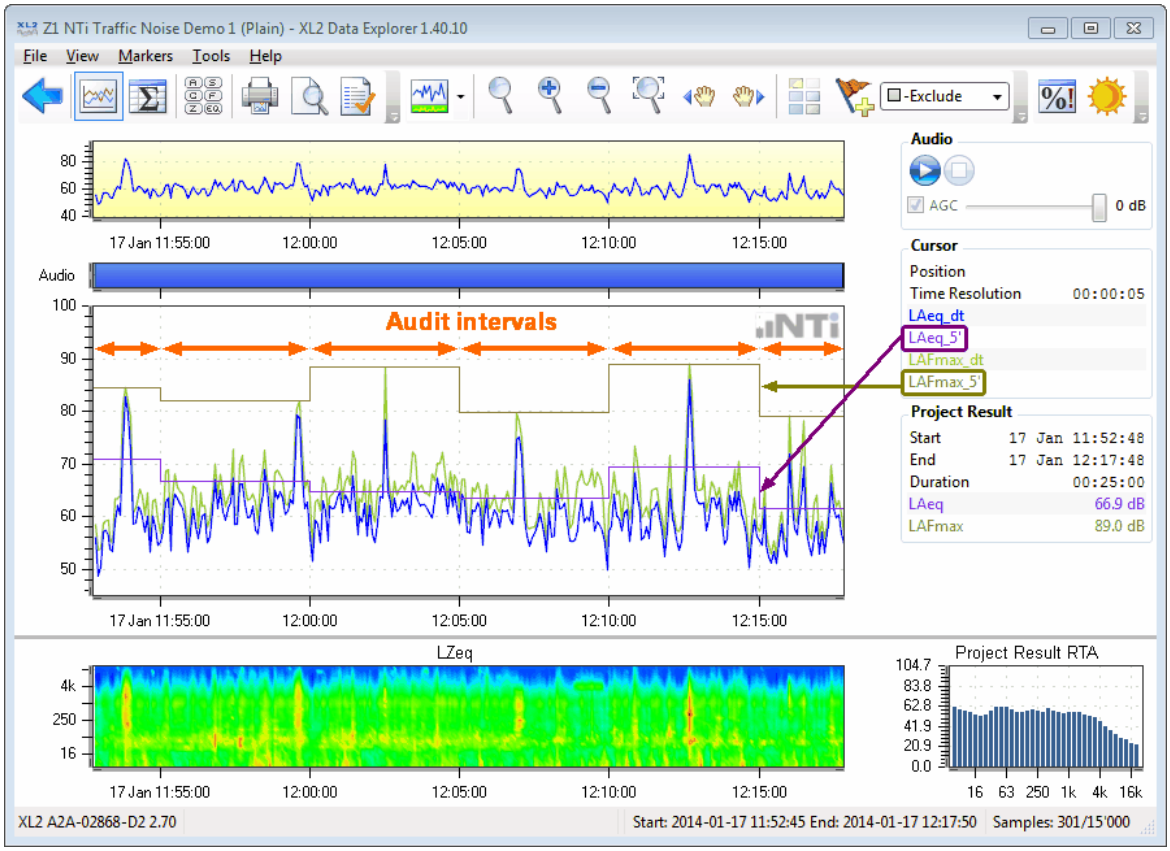

Example of Chart view with audit interval = 5'

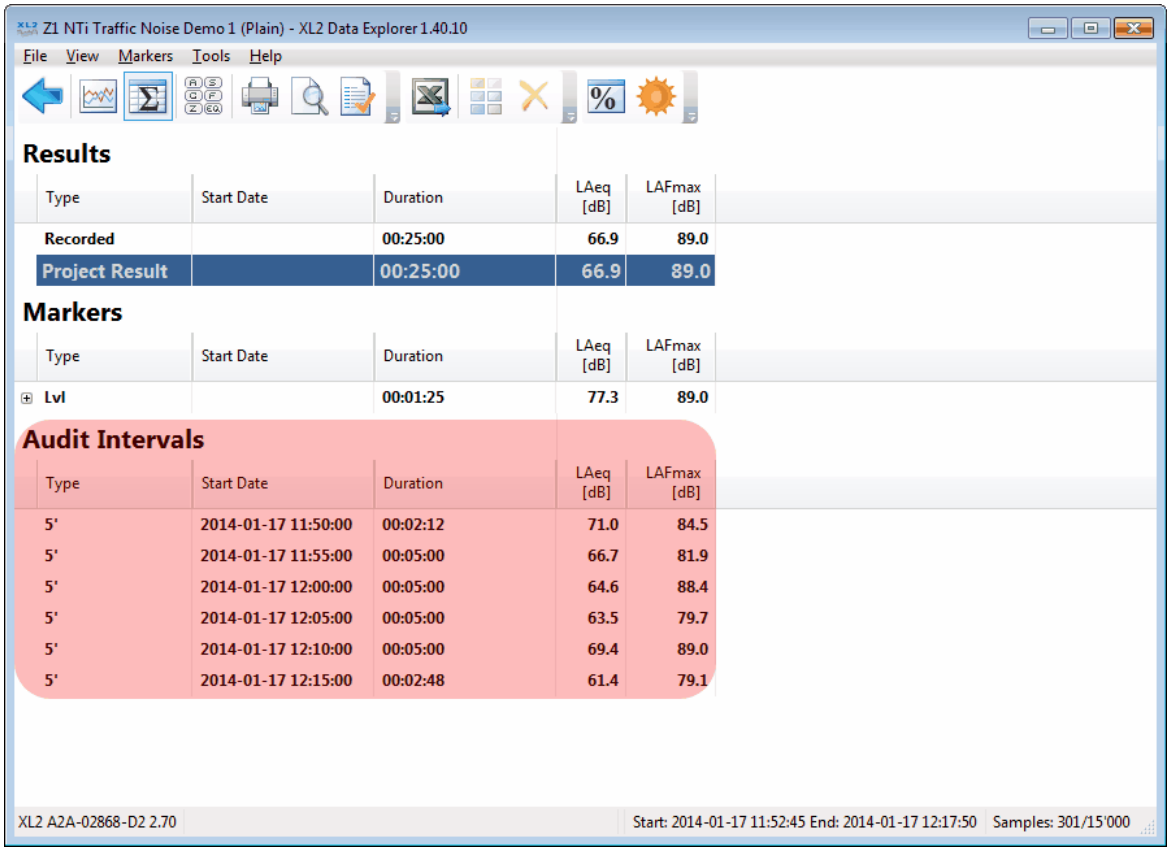

Example of Result view with audit interval = 5'

© 2015 NTi Audio AG, MBe

3.5 Main chart, Info section

Main chart

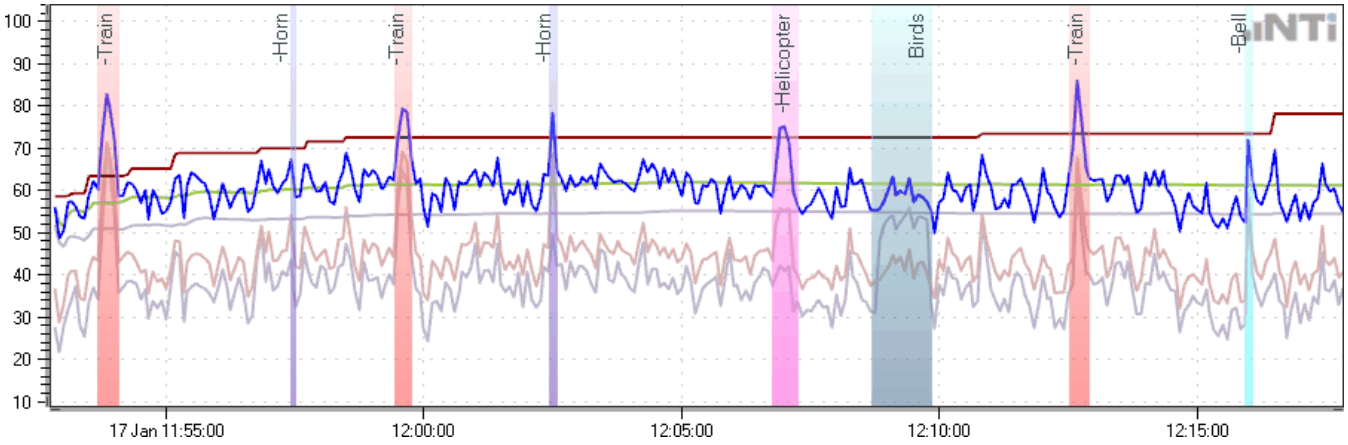

Example of Main chart with Level, RTA curves

The Main chart shows the curves of the selected levels and RTA data over time.

- Zoom in to or out of a specific area.
- Move the cursor to a specific position in the Main chart to read the instantaneous value(s) of the displayed level(s) in the Info section.

Hint ***There is a gap between the start point of the recording, and the first sample(s) of the result curve(s). This gap corresponds to the XL2 log "Interval dt". The first results are only available at the end of the first log interval, whereas the audio file recording starts at the very beginning.***

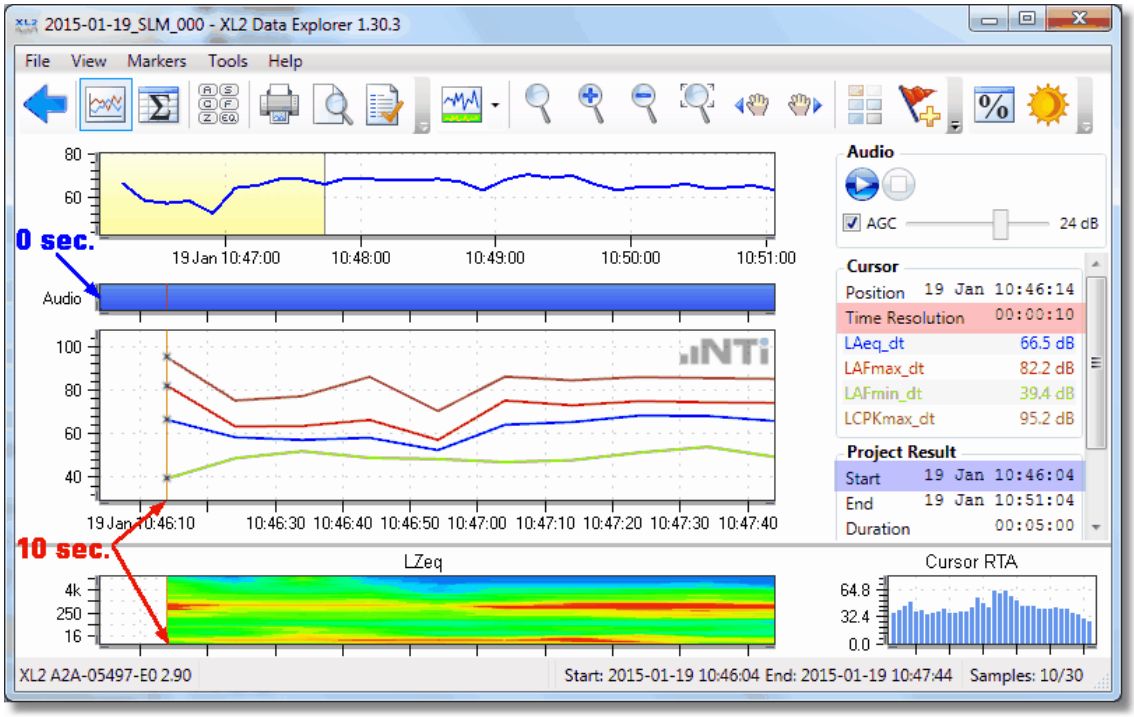

The audio file recording starts at the very beginning (0 s), while the first samples are only available after the first logging interval dt has elapsed (10 s)

© 2015 NTi Audio AG, MBe

Info section

The Info section provides contextual information related to the displayed levels and the current cursor position.

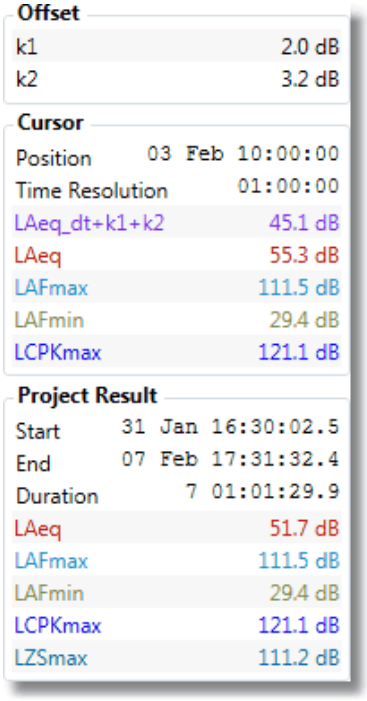

Example #1 of Info section

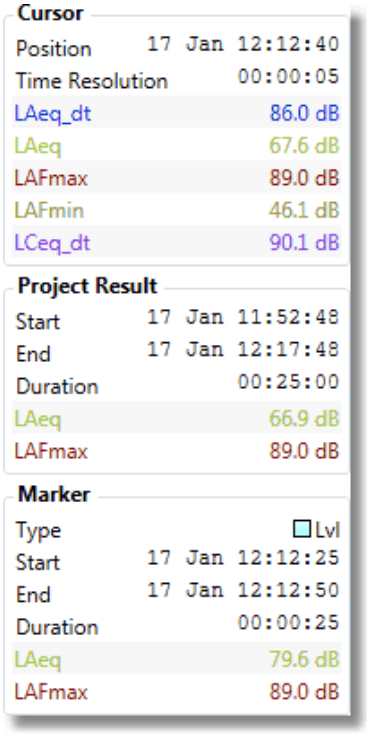

Example #2 of Info section

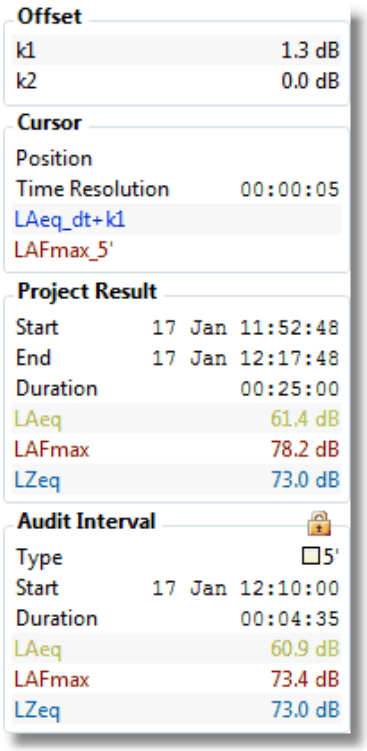

Example #3 of Info section

Hint ***The "Marker" extension appears as soon as the mouse is placed on a Marker band.***

- **Offset**: values of the correction-factors k1, k2 (only visible if at least one correction-factor ≠ 0)
- **Cursor**: instantaneous values of the cursor
  - Position: date & time of the current cursor position
  - Time resolution of the currently-displayed Main chart (depends on the actual zoom range)
  - The instantaneous value(s) and color of the displayed level(s) at the current cursor position
- **Result**: absolute result data
  - Start, End and duration of the whole recording
  - The Results (i.e. all recorded values minus the excluded Markers)
- **Marker**: properties of the selected Marker
  - Type of the Marker
  - Start, End and duration of the Marker
  - Level data values of the Marker
- **Audit Interval**: properties of the selected Audit Interval
  - Type of the Audit Interval
  - Start, End and duration of the Audit Interval
  - Level data values of the Audit Interval

© 2015 NTi Audio AG, MBe

3.6 Spectrogram, RTA spectrum

Spectrogram

The Spectrogram displays the logged spectra of the XL2 test (i.e. sound level at each frequency over time).

- X-axis: time
- Y-axis: frequency
- Color: sound level
  - red = highest level value
  - green = medium
  - turquoise = 50% of maximum level
  - dark blue = low
  - black = lowest level value

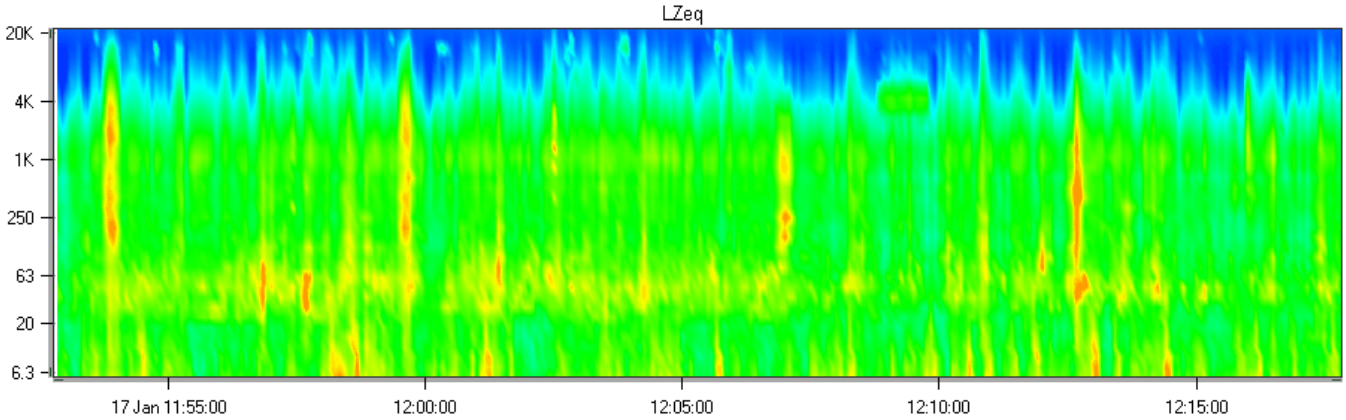

Example of Spectrogram

NOTE **The Spectrogram and the RTA spectrum are only available if "Add Spectra" was set to "Yes" in the XL2 during the data logging.**

Hint ***Right-click in the Spectrogram and select 'Show Legend' to show the color assignments.***

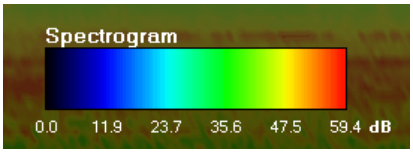

Legend

Hint ***You may edit the RTA-axis via the Zoom panel and thus define an absolute level ↔ color scheme. This may improve e.g. the comparison of the spectra of different projects.***

© 2015 NTi Audio AG, MBe

RTA spectrum

The RTA spectrum displays the LZeq level vs. frequency of the cursor position; it may be enlarged via the 'Change Layout' button.

i. Cursor outside Main chart / Spectrogram → overall project spectrum is displayed

ii. Cursor over Main chart or Spectrogram → spectrum at the current cursor position is displayed

iii. Cursor over a Marker label → spectrum of the marked area is displayed (*Hint: Marker color applies also to the RTA spectrum*)

iv. Cursor locked to all markers of the same type → spectrum of all markers of the same type is displayed

v. Cursor locked to Audit Interval → spectrum of the selected area

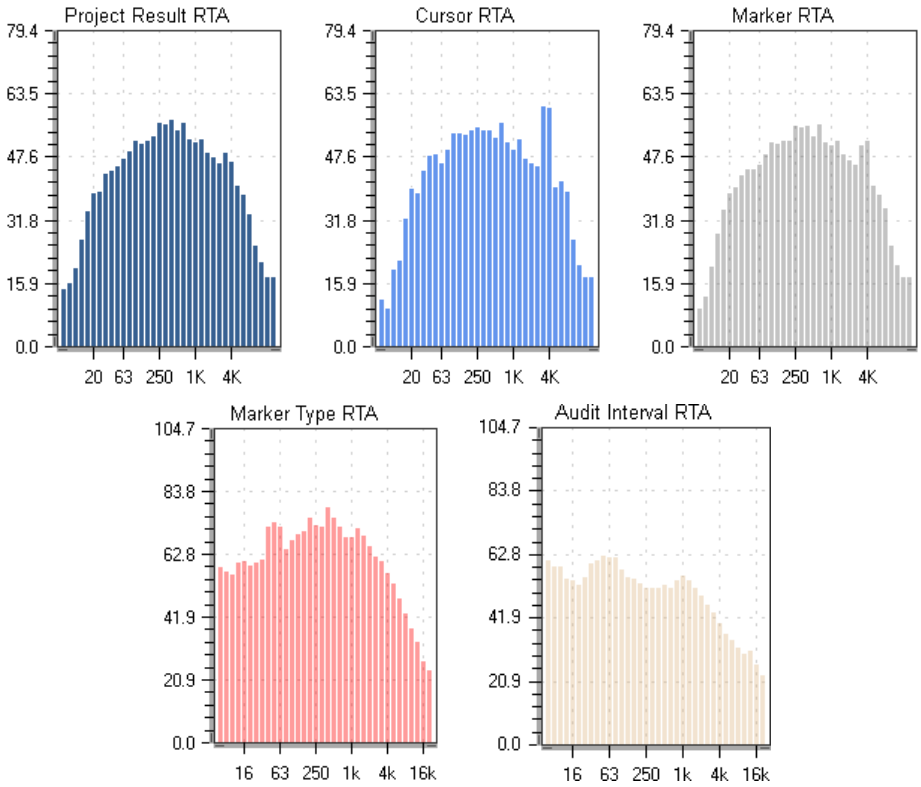

Different RTA spectrums displayed (default size) with different cursor positions (i, ii, iii, iv, v)

© 2015 NTi Audio AG, MBe

In addition, the RTA spectrum provides individual level/frequency information both numerically (on top of the graph), and graphically with a red bar.

a) Move the cursor over the RTA spectrum or Spectrogram

b) Lock the cursor in the Main chart or on a Marker label, then move it over the RTA spectrum.

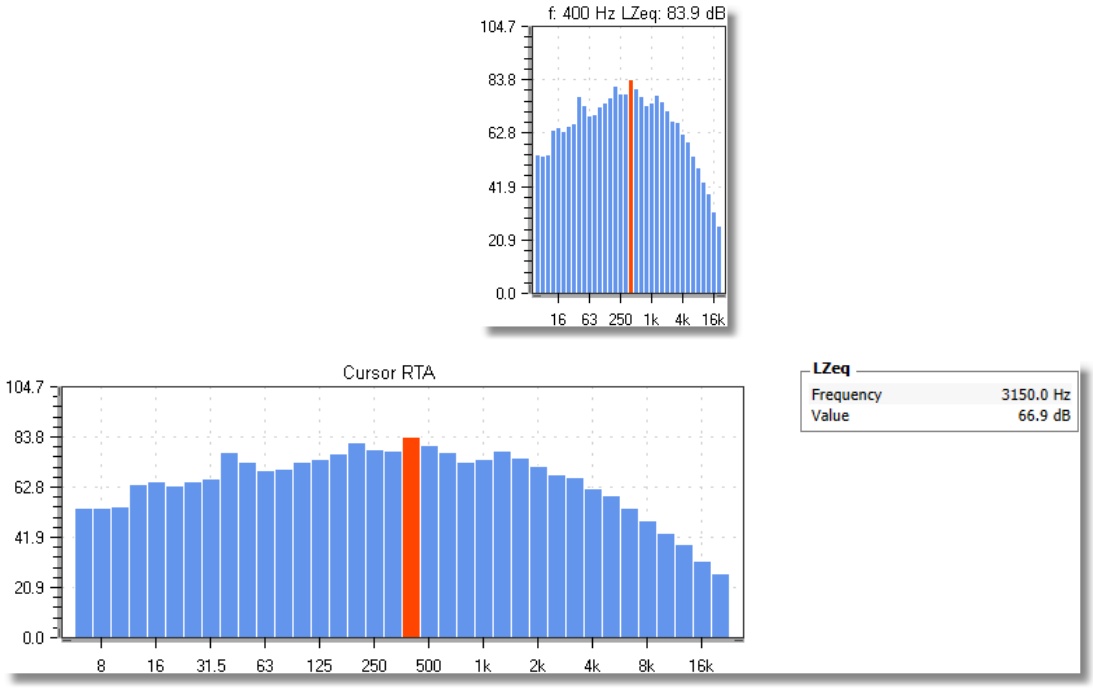

RTA spectrum with readout: default size (above) / large size (below)

© 2015 NTi Audio AG, MBe

3.7 Cursor

The cursor (mouse pointer) can be used to perform several actions:

- Readout the instantaneous level results (-> info section) or level & frequency (-> RTA spectrum)
- Zoom & pan
- Start audio file replay: right-click on the required start point in the Main chart or Spectrogram, then select 'Play from here'

Readout

The info section shows the instantaneous level or spectrum of the cursor position in the Main chart or Spectrogram.



- If the cursor is located in the Main chart, the info section shows the corresponding level values. In addition, the intersection(s) of the cursor and the displayed curve(s) are highlighted by a small "x".
- If the cursor is located in the Spectrogram, the frequency and the level value that corresponds to the actual cursor position is also shown in the Info section.

Cursor color

The default cursor color is **red**. While the audio file is playing, the cursor is **blue**.

Zoom-in/-out, pan

- Zoom-in:
  - select the zoom area with left-click+drag over the target area of the Main chart or Spectrogram, or
  - use the scroll wheel of your mouse.
- Zoom-out:
  - double left-click on the Main chart or Spectrogram, or
  - use the scroll wheel of your mouse.
- Pan:
  - Overview chart, place the cursor on the zoom range (yellow area) then left-click+drag
  - Main chart or Spectrogram, press Ctrl+left-click+drag

Lock cursor

The cursor position can be locked by right-clicking in the Main chart or Spectrogram, or over a Marker label, or in an Audit Interval. The RTA spectrum consequently shows the spectrum at the corresponding cursor position, or of the marked area.

Lock cursor ... → RTA spectrum

a) ... in the Main chart → of the specific cursor position

b) ... to a single Marker → of the marked area

c) ... to all Markers of a specific type → of the combined Marker areas

d) ... in the Spectrogram → of the specific cursor position

e) ... to an Audit Interval → of the marked area

Hint ***A locked cursor is indicated by a 🔒 in the Info section.***
When printing a report, the values of the locked cursor appear in the printout below the charts.

© 2015 NTi Audio AG, MBe

To unlock the cursor,

- press Esc
- click on in the Info section
- right-click and select "Lock cursor" again
- lock the cursor at a new position

© 2015 NTi Audio AG, MBe

3.8 Zoom & pan

Zoom

There are several ways to zoom:

- Click on the , buttons to zoom in/out,
- Place the cursor in the Main chart or Spectrogram, then
  - left-click+drag to the end position of the required zoom range,
  - use the scroll wheel of your mouse to zoom in/out.
- Click on the button to open the Zoom panel, and manually edit the X-axis zoom range, Y-axis scale and the RTA-axis color scheme:

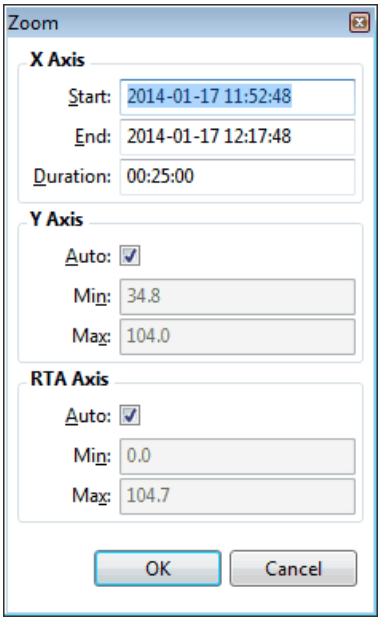

Zoom panel

Hint ***The Y-axis scaling may be adjusted to a predefined default via the preferences. To adjust the Y-axis of an XL2 Test file that has been previously imported, right-click on the Y-axis section of the Zoom panel and select 'Default'.***

- Return to the overall view:
  - click on ,
  - double click on the Main chart,
  - right-click on the Main chart or Spectrogram and select 'Zoom All Out'.

Pan

When you are zoomed in, there are several ways to pan:

- Click on the or button.
- Press the left / right arrow on the PC keyboard.
- Click on the zoom range in the Overview chart and move it with the mouse.
- Press Ctrl+left-click in the Main chart or Spectrogram and move the zoom range with the mouse

© 2015 NTi Audio AG, MBe

3.9 Markers

Markers are a very helpful way to

- exclude user-defined areas of the recording from the overall result calculation,
- and highlight specific events that occurred during the recording.

Markers are either logged by the XL2 during the recording, or manually added by the user within the Data Explorer. Every Marker is displayed as a colored band in the Main chart.

Irrespective of how it was created, any Marker may be edited or deleted by the user.

Marker types

The XL2 Data Explorer supports eleven (11) different Marker types, which are by default labeled "Exclude" and "Marker 1...10". The name and color of each of these Marker types may be edited. Also, you can choose whether each Marker type should be Excluded from the Result calculation.

Click on to open the 'Define Marker Types' panel.

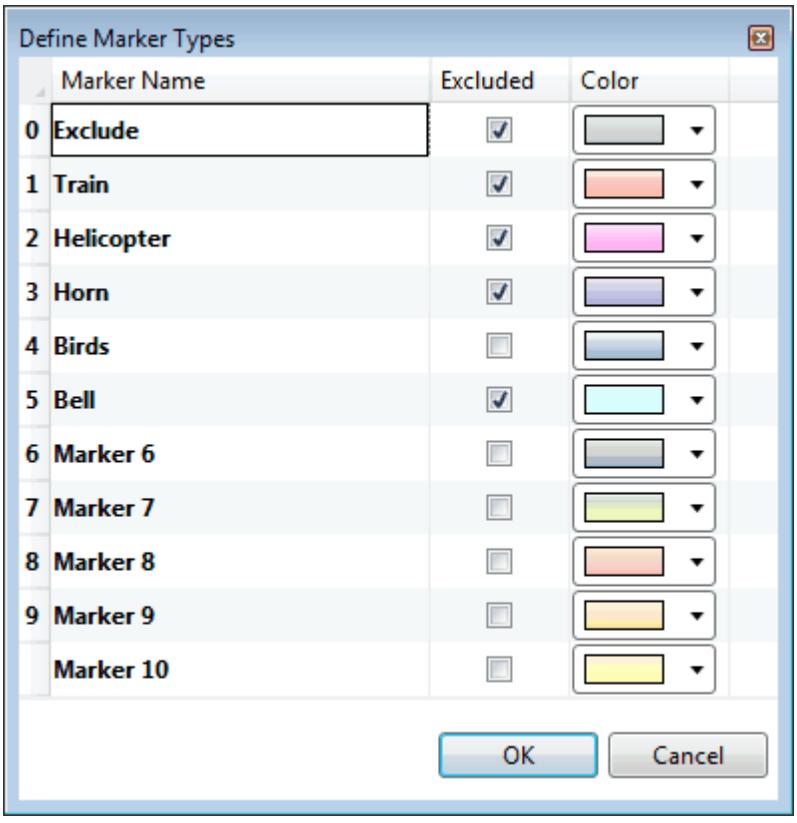

Example of edited Marker types

The panel shows the 11 Marker types.

- Double left-click on any entry in the first column to edit the corresponding Marker Name (consequently the name of all Markers of this type in the Main chart or Result view will be amended).
- Tick the checkbox in the second column to exclude all Markers of this type from the level result calculation.
- Amend the color of any Marker type via the corresponding dropdown menu.

Hints ***The level data of an excluded Marker is not considered for the overall level result calculation. In the Main chart, every excluded Marker is identified by a "–" (minus) sign in front of its name.***

© 2015 NTi Audio AG, MBe

If Markers were set by the XL2 unit during the recording, they are assigned and labeled as follows:

- Marker 4 → Pause: the XL2 recording had paused for a while
- Marker 5 → Lvl: the XL2 input level exceeded the user-defined threshold
- Marker 6..9 → Key 1...4: the operator pressed the XL2 Input Keypad during the recording
- Marker 10 → Error: a technical problem (e.g. SD-card overflow) occurred during the recording

Create, edit or delete a Marker

Markers can be created, edited or deleted using buttons, context menus or the keyboard.

Add Marker

1. Select the Marker type using the 

combo box, then click on the button
   - or -
   press the corresponding number key 0...9 on the PC keyboard.
2. Create the Marker by selecting an area in the Main chart with left-click+drag.

Hint ***Overlapping Markers are supported.***

Marker type, position, duration

The type, the start/end points or the duration of any Marker can be edited, regardless whether it has been imported from an XL2 test, or created in the Data Explorer software.

Right-click on the Marker (or Marker name) in the Main chart and select 'Edit', then

- amend the Marker Type, Start, End or Duration in the Info section, or
- click on the left or right edge of the Marker band and manually adjust it with the ↔ cursor, or
- click on the Marker band and pan it with the ⟺ cursor.

Click on 'OK' in the Info section to confirm or on 'Cancel' to abandon your changes.

Delete

To remove a Marker,

- right-click on it in the Main chart and select 'Marker → Delete', or
- right-click on its name in the Main chart and select 'Delete'.

Marker Spectrum

You may either display the RTA spectrum of a specific Marker, or of all Markers of the same type.

a) RTA spectrum of a specific Marker
   i. Right-click on the Marker name and select 'Lock'
   ii. Right-click on the Marker area and select 'Marker → Lock'

b) RTA spectrum of all Markers of the same type
   i. Right-click on the Marker name and select 'Lock All of Type [*MarkerName*]'
   ii. Right-click on the Marker area and select 'Marker → Lock All of Type [*MarkerName*]'

© 2015 NTi Audio AG, MBe

Part IV

4 Result view

The Result view summarizes the numerical results of the selected levels in a table.

Hint ***Click on to select the level results that are displayed in the columns. Notice that the Result view does not display dt values.***

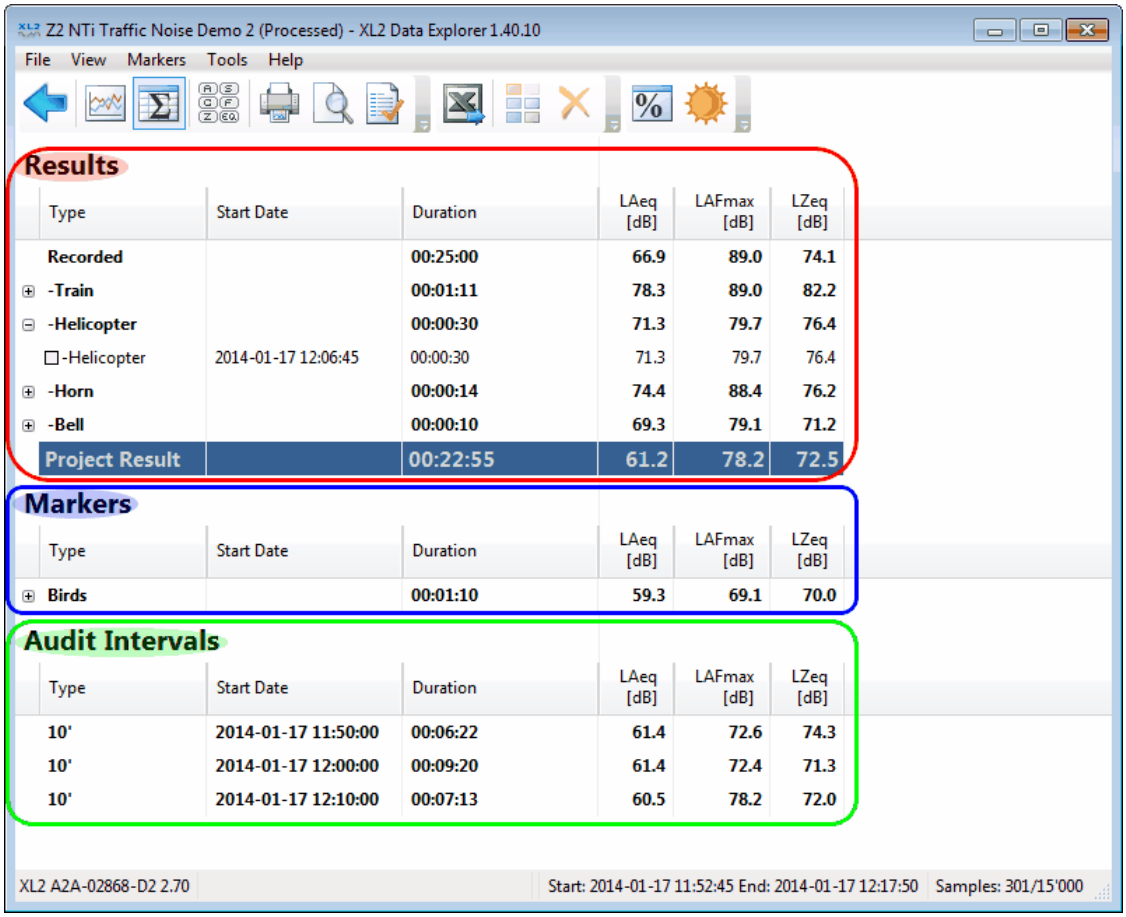
Z2 NTi Traffic Noise Demo 2 (Processed) - XL2 Data Explorer 1.40.10
File View Markers Tools Help
Results
Type Start Date Duration LAeq [dB] LAFmax [dB] LZeq [dB]
Recorded 00:25:00 66.9 89.0 74.1
-Train 00:01:11 78.3 89.0 82.2
-Helicopter 00:00:30 71.3 79.7 76.4
-Helicopter 2014-01-17 12:06:45 00:00:30 71.3 79.7 76.4
-Horn 00:00:14 74.4 88.4 76.2
-Bell 00:00:10 69.3 79.1 71.2
Project Result 00:22:55 61.2 78.2 72.5
Markers
Type Start Date Duration LAeq [dB] LAFmax [dB] LZeq [dB]
Birds 00:01:10 59.3 69.1 70.0
Audit Intervals
Type Start Date Duration LAeq [dB] LAFmax [dB] LZeq [dB]
10' 2014-01-17 11:50:00 00:06:22 61.4 72.6 74.3
10' 2014-01-17 12:00:00 00:09:20 61.4 72.4 71.3
10' 2014-01-17 12:10:00 00:07:13 60.5 78.2 72.0
XL2 A2A-02868-D2 2.70
Start: 2014-01-17 11:52:45 End: 2014-01-17 12:17:50
Samples: 301/15'000

Example of Result view

Structure

The Result view is vertically divided in two sections, Project Results and Markers.

a) Project Results

1. **Recorded**: the overall level results including the data of all Markers.
2. Every Marker with a "–" sign in front of its name is excluded from the Result and shown separately
3. **Result** (highlighted row): the overall level results without considering the data of the excluded Markers.

b) Markers

The individual results of all remaining Markers (i.e. no excluded Markers)

c) Audit Intervals

The individual results of all Audit Intervals

© 2015 NTi Audio AG, MBe

Features

The following operations are supported in the Result view.

- Select the levels that are displayed.
- Click on ⊞ or ⊟ to expand or collapse Markers.
- Right-click to the Result view and select 'Expand All' or 'Collapse All' (applies to all Marker categories).
- Double click on a Marker or an Audit Interval to open the Chart view, with the zoom range at the selected Marker position / Audit Interval, respectively.
- Delete a selected Marker if necessary.
- Click on to export the formatted table to an MS Excel file.
- Open the Level statistics calculation
- Open the Day Night Level calculation.

Hint ***All settings are saved in the Project, i.e. the Result view layout will re-open in its last state when the project is opened again.***

4.1 Markers (in Result view)

The Result view shows the Type, Start Date, Duration and the measured level(s) within the corresponding Marker.

-Train		0:01:11	78.3	89.0	81.7
Type	Start Date	Duration	LAeq [dB]	LAFmax [dB]	LCeq [dB]
-Train	2014-01-17 11:53:37	0:00:26	77.8	84.5	79.8
-Train	2014-01-17 11:59:25	0:00:20	76.6	81.9	79.4
-Train	2014-01-17 12:12:30	0:00:25	79.6	89.0	84.1

Example of Markers in the Result view

Hint ***The impact of including/excluding a Marker in/from the result calculation can be directly visualized via the 'Define Marker Types' panel.***

Please notice that

- Markers can only be edited in the Main chart
- you may nevertheless delete the Marker(s) in the Result view by using the button
- if you double-click on a Marker line, the software automatically toggles to the Chart view and displays the corresponding section

Hint ***Right-clicking in the Result view opens a context menu to expand or collapse all Markers, or to copy the selected row to the clipboard.***

© 2015 NTi Audio AG, MBe

4.2 Audit Intervals (in Result view)

The Result view shows the Type, Start Date, Duration and the measured level(s) within the corresponding Audit Interval.

Audit Intervals

Type	Start Date	Duration	LAeq [dB]	LAFmax [dB]	LZeq [dB]
5'	2014-01-17 11:50:00	00:01:46	58.2	65.2	69.6
5'	2014-01-17 11:55:00	00:04:36	62.2	72.6	75.3
5'	2014-01-17 12:00:00	00:04:50	62.5	72.4	72.2
5'	2014-01-17 12:05:00	00:00:00	---	---	---
5'	2014-01-17 12:10:00	00:04:35	60.9	73.4	73.0
5'	2014-01-17 12:15:00	00:02:38	59.7	78.2	69.4

Example of Audit Intervals in the Result view

Hint ***If an Audit Interval is completely covered by an 'Exclude' Marker, it has no results.***

Please notice that

- the duration of the Audit Intervals must be selected via the Setup Levels
- if you double-click on an Audit Interval line, the software automatically toggles to the Chart view, displays the corresponding section and locks the cursor to it.

© 2015 NTi Audio AG, MBe

Part V

5 Level Calculations

The XL2 Data Explorer offers two tools for customized level calculations,

i. the Level statistics, or percentiles are accessible via the button,

ii. the Day Night level window is opened by clicking on the button.

5.1 Level statistics

Click on to open the 'Level Statistics' window, select the Level and click on  to calculate & display the statistical distribution of recorded dt values.

- Level: select any dt value that has been recorded by the XL2
- Percentiles:
  - click on to open the 'Edit percentiles' panel.
  - tick the 'Chart' or 'Result' checkbox to select ☑ (i.e. display) or deselect ☐ all percentile results in the corresponding view.
- Audit intervals (if active): click on an Audit Interval to see the corresponding level statistics and percentile results.

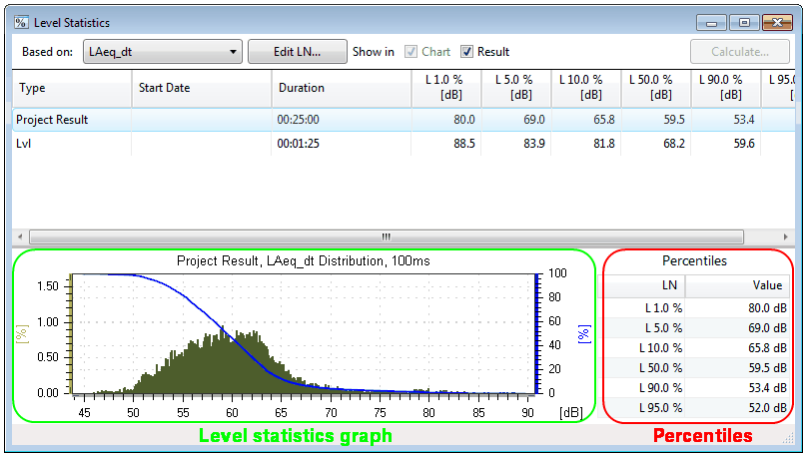

Level statistics window

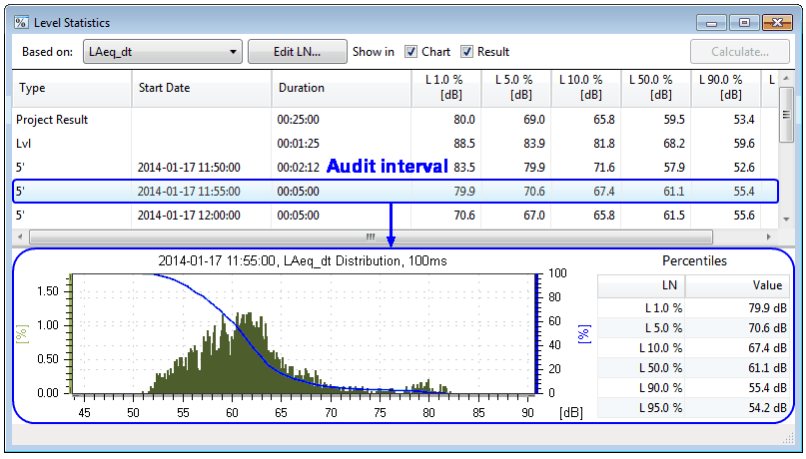

Level statistics of selected audit interval

© 2015 NTi Audio AG, MBe

Hint ***A red exclamation mark next to the button*** ***shows that the level statistics have to be re-calculated. This has to be done every time when you activate, amend or deactivate the Audit Intervals, or one or several Markers.***

Level statistics graph

- Axes:
  - the left axis [%] refers to the dt levels (green bars)
  - the right axis [%] refers to the percentiles (blue line).
- Cursor: hover over the graph to read out the dB value, probability and cumulative probability at the corresponding x-axis position.
- Zoom:
  - click & drag to select an area of the graph that shall be enlarged
  - right click on the graph, select 'Zoom...' and manually enter the preferred Min.X, Max.X, Max.Y values
  - right click on the graph and select 'Zoom All Out' to return to the full view

© 2015 NTi Audio AG, MBe

5.1.1 Percentiles

The list of LN values for the percentiles calculation can be edited as follows.

- Enter a numerical LN value in the top input box and click on 'Add'.
- Select an LN value from the list and click on 'Delete', or 'Delete All'.
- Click on 'Apply Default' to apply the default values.

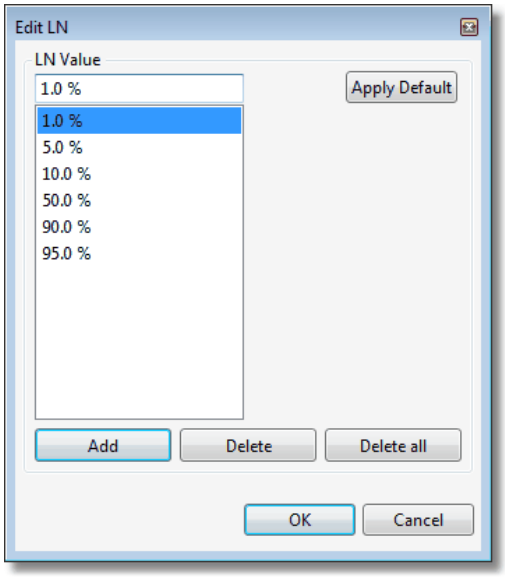

Edit percentiles panel

Hint ***The default list of LN values may be defined via the preferences. XL2 Test files that have been previously imported, may be adjusted by clicking on the 'Default' button.***

© 2015 NTi Audio AG, MBe

5.2 Day Night Level

The 'Day Night Level' window calculates the L_{Day}, $L_{Evening}$, L_{Night}, L_{DN}, L_{DEN} levels with individual weightings (penalties).

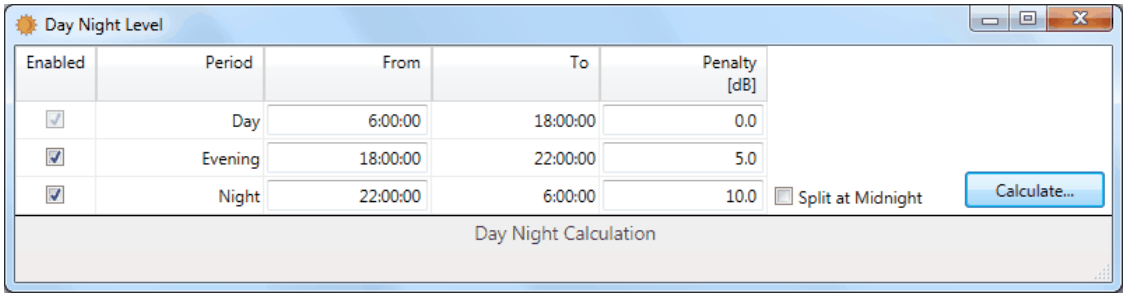

Example of Day-Evening-Night time scheme with penalties

Time scheme and penalties

The top section of the window comprises of the parameter settings for the time scheme and penalties.

- Enabled, Period: each 24 hour period can be divided into between 1 and 3 periods,
  1) Day → always enabled
  2) Night → tick checkbox to enable a separate result calculation or penalty for the night period
  3) Evening → tick checkbox to enable a separate result calculation or penalty for the evening period (only accessible if 'Night' is enabled)
- From, To: assign individual start times to the enabled periods
  - Adjust the times for when the individual enabled periods begin.
  - The end time of a period is automatically the start time of the next period.
  - Enter the times in the format **hh:mm:ss**
- Penalty: positive offset that should be added to the measurement results to reflect the annoyance level during that period.
  - Enter the penalties, expressed in dB, for the Day, Evening and Night periods separately.
- Split at Midnight: the Night level is calculated separately for each calendar day (*see example*), i.e. split by
  1) 00:00:00 hrs to start of Day +
  2) end of Day/Evening to 24:00:00 hrs

Hint ***The default list of Day Night Levels may be defined via the preferences. XL2 Test files that have been previously imported, may be adjusted by right-clicking on the top section of the window and selecting 'Default'.***

Click on Calculate... to let the system evaluate & display the level results that correspond to the current settings.

NOTE **If no valid measurement could be executed, the message "n. def." (not defined) is shown as result.**

© 2015 NTi Audio AG, MBe

5.2.1 LDEN examples

Example #1

Day Night Level

Enabled	Period	From	To	Penalty [dB]
☑	Day	6:00:00	20:00:00	0.0
☐	Evening	18:00:00	22:00:00	5.0
☑	Night	20:00:00	6:00:00	10.0

☐ Split at Midnight Calculate...

Day Night Calculation

Period	Start Date	Measurement Duration	Weighting Duration	LAeq [dB]	Penalty [dB]	Result [dB]
Day	31 Jan	3:29:57.5	14:00:00	68.0	0.0	68.0
Night	31 Jan	10:00:00	10:00:00	31.5	10.0	41.5
Ldn	**31 Jan**					**65.7**
Day	01 Feb	14:00:00	14:00:00	36.0	0.0	36.0
Night	01 Feb	10:00:00	10:00:00	30.4	10.0	40.4
Ldn	**01 Feb**					**38.4**
Day	02 Feb	14:00:00	14:00:00	35.4	0.0	35.4
Night	02 Feb	10:00:00	10:00:00	30.5	10.0	40.5
Ldn	**02 Feb**					**38.2**

Example #1: Day-Night time settings, penalties and calculated results

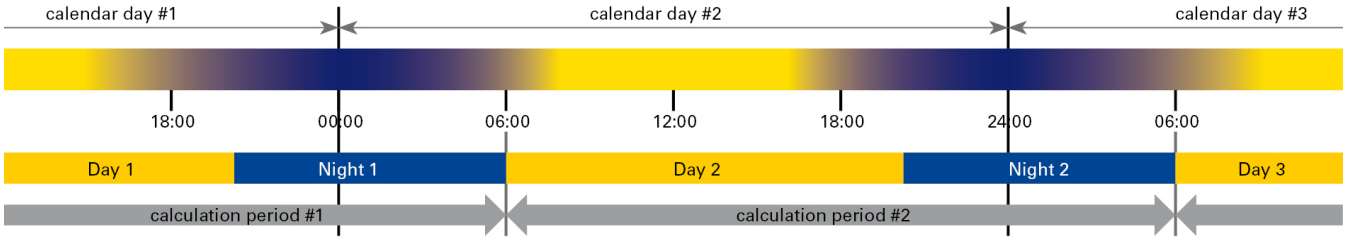

Example #1: Day-Night time scheme

© 2015 NTi Audio AG, MBe

Example #2

Day Night Level

Enabled	Period	From	To	Penalty [dB]
☑	Day	6:00:00	18:00:00	0.0
☑	Evening	18:00:00	20:00:00	5.0
☑	Night	20:00:00	6:00:00	10.0

☐ Split at Midnight Calculate...

Day Night Calculation

Period	Start Date	Measurement Duration	Weighting Duration	LAeq [dB]	Penalty [dB]	Result [dB]
Day	31 Jan	1:29:57.5	12:00:00	71.7	0.0	71.7
Evening	31 Jan	2:00:00	2:00:00	32.1	5.0	37.1
Night	31 Jan	10:00:00	10:00:00	31.5	10.0	41.5
Lden	**31 Jan**					**68.7**
Day	01 Feb	12:00:00	12:00:00	36.4	0.0	36.4
Evening	01 Feb	2:00:00	2:00:00	31.8	5.0	36.8
Night	01 Feb	10:00:00	10:00:00	30.4	10.0	40.4
Lden	**01 Feb**					**38.5**
Day	02 Feb	12:00:00	12:00:00	35.9	0.0	35.9

Example #2: Day-Evening-Night time settings, penalties and calculated results

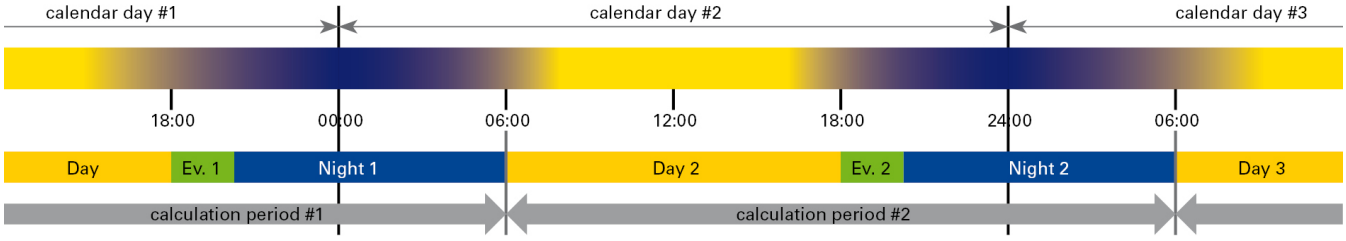

Example #2: Day-Evening-Night time scheme

© 2015 NTi Audio AG, MBe

Example #3

Day Night Level

Enabled	Period	From	To	Penalty [dB]
☑	Night	0:00:00	6:00:00	10.0
☑	Day	6:00:00	18:00:00	0.0
☑	Evening	18:00:00	20:00:00	5.0
☑	Night	20:00:00	0:00:00	10.0

☑ Split at Midnight Calculate...

Day Night Calculation

Period	Start Date	Measurement Duration	Weighting Duration	LAeq [dB]	Penalty [dB]	Result [dB]
Day	31 Jan	1:29:57.5	12:00:00	71.7	0.0	71.7
Evening	31 Jan	2:00:00	2:00:00	32.1	5.0	37.1
Night	31 Jan	4:00:00	10:00:00	31.7	10.0	41.7
Lden	**31 Jan**					**68.7**
Day	01 Feb	12:00:00	12:00:00	36.4	0.0	36.4
Evening	01 Feb	2:00:00	2:00:00	31.8	5.0	36.8
Night	01 Feb	10:00:00	10:00:00	31.1	10.0	41.1
Lden	**01 Feb**					**39.0**
Day	02 Feb	12:00:00	12:00:00	35.9	0.0	35.9
Evening	02 Feb	2:00:00	2:00:00	30.5	5.0	35.5
Night	02 Feb	10:00:00	10:00:00	30.3	10.0	40.3
Lden	**02 Feb**					**38.3**

Example #3: Day-Evening-Night time settings, split at midnight, penalties and calculated results

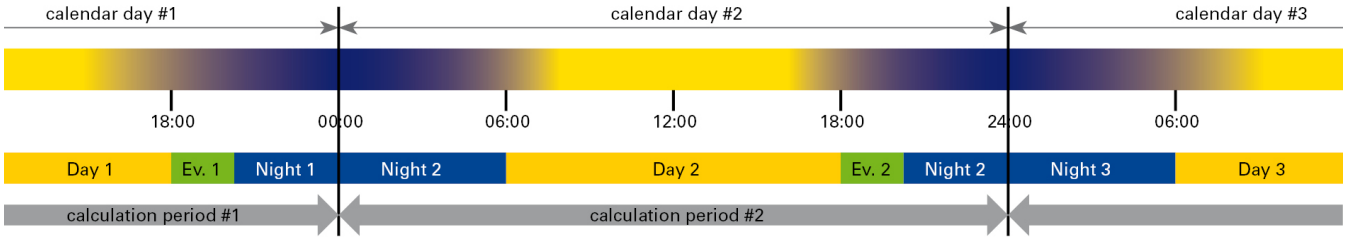

Example #3: Day-Evening-Night time scheme, split at midnight

© 2015 NTi Audio AG, MBe

Part VI

6 Reporting

The XL2 Data Explorer provides several features for creating a report from the project data.

- Editable Report properties
- Print preview, printout
- Data export to MS Excel
- Copy graph to clipboard (bitmap format)
- Copy numerical data to clipboard

6.1 Report properties

The Report properties...

- are accessible from the Chart or Result view, via the 'Report Properties' button or the menu 'File → Report Properties..',
- contain the following **editable** information:
  - Title: headline of the project report
  - Introduction: user comment that precedes the charts in the project report
  - Conclusion: user comment that is inserted at the end of the project report
  - Logo: user logo placed in the top right corner of the project report (click on 'Browse...' to select your logo)
- Tick the checkboxes of the sections that shall be included in the report.

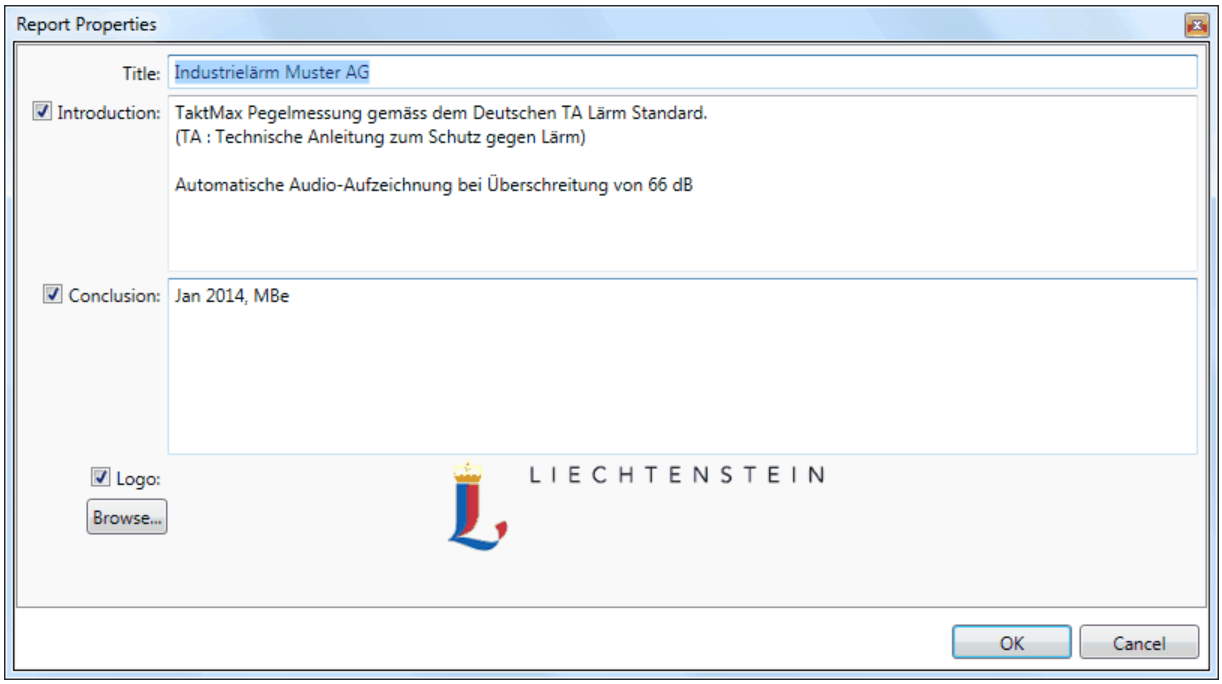

Example of Report properties

© 2015 NTi Audio AG, MBe

6.2 Report printout

Printouts

You can create and customize printable reports of the selected project data with the XL2 Data Explorer software.

1. Edit the Report properties (optional)
2. To preview the print, click on the 'Print Preview' button or select the menu 'File → Print Preview'
3. To print, click on the 'Print...' button or select the menu 'File → Print...'

LIECHTENSTEIN
NTi Traffic Noise Demo 2 (Processed)
Start: 2014-01-17 11:52:48
End: 2014-01-17 12:17:48
This demo project shows some advanced features of the XL2 Data Explorer Version 1.0
It contains 25 minutes of data and audio recorded near a street and a train line in Schaan, Liechtenstein.
Areas marked as "-Train", "-Horn", "-Helicopter" and "-Bell" are excluded from the result.
This text as well as the logo on the Report may be edited in the File->Project Properties window.
This demo is an extension of NTi Traffic Noise Demo 1 (Plain).
LAeq_dt LAeq LAFmax LCeq_dt LCeq
Cursor: 2014-01-17 12:12:40 LAeq_dt=86.0 dB LAeq=61.4 dB LAFmax=73.4 dB LCeq_dt=90.1 dB LCeq=69.8 dB
Cursor: 2014-01-17 12:12:40 Frequency=400 Hz LZeq=83.9 dB
Readouts of locked cursor
Hardware Configuration
Device Info: XL2, SNo. A2A-02868-D2, FW2.70
Mic Sensitivity: 39.9 mV/Pa (from M2230, S/N: 2601, Factory adjusted)
Range: 0 - 100 dB
LIECHTENSTEIN
Results
Type | Start Date | Duration | LAeq [dB] | LAFmax [dB] | LCeq [dB]
Recorded | | 0:25:00 | 66.9 | 89.0 | 72.1
-Train | | 0:01:11 | 78.3 | 89.0 | 81.7
-Train | 2014-01-17 11:53:37 | 0:00:26 | 77.8 | 84.5 | 79.8
-Train | 2014-01-17 11:59:25 | 0:00:20 | 76.6 | 81.9 | 79.4
-Train | 2014-01-17 12:12:30 | 0:00:25 | 79.6 | 89.0 | 84.1
-Helicopter | | 0:00:30 | 71.3 | 79.7 | 76.1
-Helicopter | 2014-01-17 12:06:45 | 0:00:30 | 71.3 | 79.7 | 76.1
-Horn | | 0:00:14 | 74.4 | 88.4 | 75.6
-Horn | 2014-01-17 11:57:22 | 0:00:04 | 68.0 | 72.8 | 72.1
-Horn | 2014-01-17 12:02:25 | 0:00:10 | 75.5 | 88.4 | 76.4
-Bell | | 0:00:10 | 69.3 | 79.1 | 69.7
Project Result | | 0:22:55 | 61.2 | 78.2 | 69.4
Markers
Type | Start Date | Duration | LAeq [dB] | LAFmax [dB] | LCeq [dB]
Birds | | 0:01:10 | 59.3 | 69.1 | 63.4
Birds | 2014-01-17 12:08:39 | 0:01:10 | 59.3 | 69.1 | 63.4
This text may be edited in the File->Project Properties window.
Some suggestions for modifying the content of this Report to suit your presentation:
- Edit the Project Properties
- Zoom and/or scroll the charts to the specific area which you want to see in the report
- Hide/show the spectrogram
- Configure the Measurements (LAEQ, LAF, ...) in View-> Customize Measurements
- Collapse/expand Markers in the Results view.
Hope you enjoyed this demo.
NTi Audio AG

Example of print preview

Hints ***If you lock the cursor within the Main chart or Spectrogram, the corresponding data are added to the printout.***
The report printout includes neither the default size RTA spectrum, nor the Level statistics.

© 2015 NTi Audio AG, MBe

6.3 Data Export

Export to MS Excel

Click on the button to export the numerical data of the Result view to an MS Excel spreadsheet.

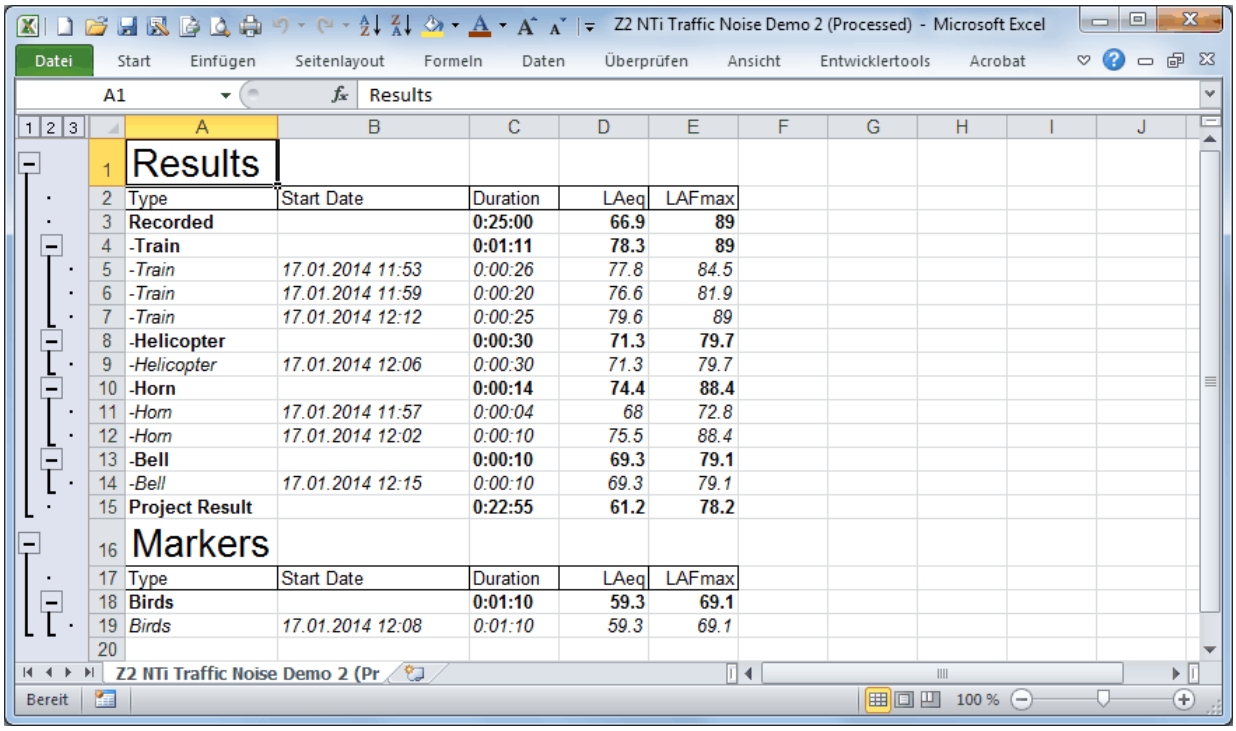
Z2 NTi Traffic Noise Demo 2 (Processed) - Microsoft Excel
Datei Start Einfügen Seitenlayout Formeln Daten Überprüfen Ansicht Entwicklertools Acrobat
A1
Results
Z2 NTi Traffic Noise Demo 2 (Pr
Bereit
100 %

	A	B	C	D	E
1	Results				
2	Type	Start Date	Duration	LAeq	LAFmax
3	**Recorded**		**0:25:00**	**66.9**	**89**
4	**-Train**		**0:01:11**	**78.3**	**89**
5	*-Train*	*17.01.2014 11:53*	*0:00:26*	*77.8*	*84.5*
6	*-Train*	*17.01.2014 11:59*	*0:00:20*	*76.6*	*81.9*
7	*-Train*	*17.01.2014 12:12*	*0:00:25*	*79.6*	*89*
8	**-Helicopter**		**0:00:30**	**71.3**	**79.7**
9	*-Helicopter*	*17.01.2014 12:06*	*0:00:30*	*71.3*	*79.7*
10	**-Horn**		**0:00:14**	**74.4**	**88.4**
11	*-Horn*	*17.01.2014 11:57*	*0:00:04*	*68*	*72.8*
12	*-Horn*	*17.01.2014 12:02*	*0:00:10*	*75.5*	*88.4*
13	**-Bell**		**0:00:10**	**69.3**	**79.1**
14	*-Bell*	*17.01.2014 12:15*	*0:00:10*	*69.3*	*79.1*
15	**Project Result**		**0:22:55**	**61.2**	**78.2**
16	Markers				
17	Type	Start Date	Duration	LAeq	LAFmax
18	**Birds**		**0:01:10**	**59.3**	**69.1**
19	*Birds*	*17.01.2014 12:08*	*0:01:10*	*59.3*	*69.1*
20					

Example of a Data Explorer result table after export to MS Excel

Copy bitmap to clipboard

Right-click on a graph and select 'Copy Bitmap'; the graph is now in your clipboard and may be pasted to a document, etc.

Copy data to clipboard

Right-click on a graph and select 'Copy Data' or 'Copy Selected Rows'; the relevant data is now in your clipboard and may be pasted to a table, document, etc.

© 2015 NTi Audio AG, MBe

Index

- A -

AGC 32
audio
  bar 28, 32
  player 28, 32
audit intervals 35
  activate 33
  level statistics 52
  percentiles 52
automated gain control 32

- B -

bitmap 62

- C -

chart
  main 37
  overview 31
  spectrogram 39
  spectrum 39
  view 28
clipboard 62
clipping 32
copy project 19
copy to clipboard 62
correction factor 33
cursor 42
  lock 61

- D -

data 21
  export 48, 60, 62
  flow 21
  import 9, 19, 21, 24
Data Explorer
  option 19, 21
  structure 7
day 55
  example 56
default settings 24, 33, 54, 55

- E -

edit
  marker 45
error marker 45
evening 55
  example 56
exclude 45
export
  data 62
  project 19
export data 48

- F -

folder 19

- G -

gain control 32

- H -

hardware 6
highlights 5

- I -

import
  preferences 24
  repeat mode data 21
  XL2 file 21
info section 28, 37
installation 6
instance 7
internet 21
introduction 5

- K -

k1, k2 33
key marker 45

- L -

LDEN 55
  example 56
legacy data 21

© 2015 NTi Audio AG, MBe

legend 39
level
display 37
marker 45
overview 31
results 48
setup 33
setup default 24
spectrum 39
statistics 52
statistics printout 61
license 21
license agreement 16
lock cursor 42, 61

- M -

main chart 28, 37
marker
data 48
result view 49
spectrum 45
measurement results 37
midnight 55
MS Excel 61, 62
multiple instances 7

- N -

night 55
example 56
NTi Audio 5, 16

- O -

option 19, 21
overview chart 28, 31

- P -

pan 44
pause 45
penalty 55
percentiles 52, 54
default 24
printout 61
printout 61
probability 52
project 19
content 26
copy 19
info 26, 28
restore 19
save 19
properties of report 60

- R -

read-only mode 7
readout 42
repeat mode
data import 21
replay sound file 32, 42
report 60, 61
properties 60
restore project 19
result view 48
RTA
levels default 24
RTA spectrum 39
printout 61

- S -

save project 7, 19
separator 28
setup levels 33
default 24
share project 19, 21
shift zoom range 44
software
installation 6
structure 7
spectrogram 28, 39
spectrum 28, 39
of marker 45
statistics 52
step-by-step 9
structure 7
support 5

- T -

table export 62
time axis 28
trial mode 21
tutorial 9

© 2015 NTi Audio AG, MBe

- U -

undo amendments 19

- V -

view 7
chart 28
project 19
result 48

- X -

X-axis zoom 44
XL2
marker 45
XL2 Data Explorer
option 19, 21
structure 7
XL2 setup 9

- Y -

Y-axis scale 44
default 24

- Z -

zoom 42, 44

© 2015 NTi Audio AG, MBe

Notes

© 2015 NTi Audio AG, MBe